# Lynx Manual

#### **Revision History**

Style Sheet is: X:\Company\SmartMasters\Orion

Filenames are: X:\Company\Manuals\ReferenceManual\Components\Lynx\RevA\LynxManual.lwp X:\Company\Manuals\ReferenceManual\Components\Lynx\RevA\LynxTitlePage

 $X: \company\Manual\ReferenceManual\Components\Lynx\RevB\LynxManual.lwp$ 

 $X: \verb|Company|Manuals|ReferenceManual|Components|Lynx|RevB|LynxTitlePage||Company|Manuals||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||Components||Lynx||RevB||LynxTitlePage||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||ReferenceManual||Ref$ 

Rev	Date	Author	Description
A	16 Aug 99	Mark Hayman	Initial release.
B	22 Mar 00	Brad Tavner	Rev E Chassis updates.

Approval: \_\_\_\_\_

1.	Introduction	1
2.	Organization of this Manual	3
3.	Unpacking & Post Delivery Inspection	5
4.	Technical Description	7
	Overview of the Hardware	
	HRD24 Module Comms Controller Module	
	Satellite Modem Module	. 15
5.	Getting Started	. 17
	Introduction	. 17
	Installation	. 17
	Testing the Lynx Modules	. 18
6.	Hardware Setup	. 21
	Introduction	. 21
	Signal input	
	Basic troubleshooting	. 23
7.	HRD24 Firmware Configuration	
	Overview	
	Accessing the HRD24 Setup	
	Configuration Menus	. 27
8.	Servicing	. 31
	Maintenance	
	HRD Configuration Port	
	Software & Firmware Updates	
	Internal Configuration Options	. 33
A	opendix A - Connector Pinouts	. 37
A	opendix B - Libra Data Format	. 39
	Description of NMXP Packets	. 41
	CRC for the Packets	. 42
	Outgoing Packets	. 44

Incoming Packets	
Appendix C - Instrument Log Messages	55
Appendix D - Filter Response Plots, Poles & Zeroes	
Response	
Appendix E - ViewDat	
Appendix F - Upgrading HRD24 firmware using ZOC	
Appendix G - External Cable Drawings	

# 1. Introduction

Congratulations on your choice of the Lynx digitiser, a part of the Nanometrics Libra Satellite Seismograph System. As you use your new Lynx digitiser we know you will appreciate the many features that provide excellent performance.

It is very important to understand how the Lynx digitiser operates before you use it. On the following pages you will find a wealth of information regarding all aspects of the Lynx digitiser. Please read the instructions carefully.

If you have problems or need technical support, please submit requests for technical support by e-mail or fax. This permits you to fully explain your problem and include "evidence" as it allows us to submit your problem to the most knowledgeable person for reply.

by e-mail:	support@nanometrics.ca
by fax:	To: Support at fax (613) 592-5929
by phone:	Please ask for Support at (613) 592-6776

Nanometrics Inc. 250 Herzberg Road Kanata, Ontario Canada K2K2A1 This page intentionally left blank.

# 2. Organization of this Manual

This manual is organized in ten major sections:

Chapter 1	<b>Introduction</b> Introductory notes to this manual.
Chapter 2	<b>Organization of this Manual</b> Notes on how to use this manual.
Chapter 3	<b>Unpacking and Post Delivery Inspection</b> Identification of the components you have purchased. It also references an "as-shipped" section.
Chapter 4	<b>Technical Description</b> Description of features and technical specifications of the Lynx.
Chapter 5	Getting Started Recommendations for using the digitiser for the first time.
Chapter 6	Hardware setup Hardware setup instructions.
Chapter 7	<b>Software configuration</b> Description of software configuration parameters and configuration menus.
Chapter 8	<b>Servicing</b> Recommended maintenance and repair procedures, including firmware update instructions.
Appendices	These list mostly tabular material such as error messages, and pin connections.

This page intentionally left blank.

# 3. Unpacking & Post Delivery Inspection

Open and inspect the shipment for possible damage. Carefully check each item for damage or defects. The following list includes items generally included with Lynx. This list might vary from application to application. To find out the exact list of items included in your shipment refer to the shipping documents.

The system should have the following contents:

- 1. Lynx digitiser
- 2. GPS antenna and mounting bracket
- **3.** GPS antenna cable
- 4. Satellite antenna cables
- 5. Power cable
- 6. Satellite antenna
- 7. Lynx digitiser manual
- 8. As-shipped Sheet
- 9. Release Notes (if applicable)
- 10. CD with digitiser test program, configuration user interface software and firmware code

#### Checking the As-Shipped Sheets

As written, this manual covers the Lynx digitiser. Please study the as-shipped data sheet to determine the exact configuration of the digitiser. The as-shipped sheet lists the serial numbers of the parts shipped, the exact hardware configuration and calibration constants associated with your hardware. It also includes a hard copy of the as-shipped sheet of the Lynx digitiser. This will determine how your Lynx digitiser operates when first turned on. Several features may have been added to the digitiser since this manual was released. Such new features are described in the Release Notes which have precedence over the information in the manual.

#### Backup

It is strongly recommended that you backup the CD or the diskette.

This page intentionally left blank.

# 4. Technical Description

# **Overview of the Hardware**

The Lynx satellite telemetry digitiser is specifically intended to be deployed with satellite telemetry seismograph networks with error correction.

The Lynx integrates all necessary hardware to digitise the analog signal produced by the seismometer, to time-stamp digital data, to transmit the data and the SOH information to the central site over a VSAT link and to receive messages from the acquisition centre. It includes a 24 bit high resolution digitiser, high precision GPS timing subsystem, serial and Ethemet ports for external instrumentation, a satellite modem for both inbound and outbound links and all necessary hardware for the interconnection and operation of all of the above.

The transmission protocol used over the VSAT link includes UDP / TCP / IP. Essentially each Lynx digitiser can be considered as a remote node of a wide area network. The Ethernet port fully supports UDP & TCP/IP protocols such as E-mail, ftp, and sockets.

The following block diagram provides you with a clear view of the different hardware modules integrated in Lynx and the way it is connected with external components of the remote site. The HRD24 digitiser, Comms Controller board and Satellite Modem board are described in the following sections.

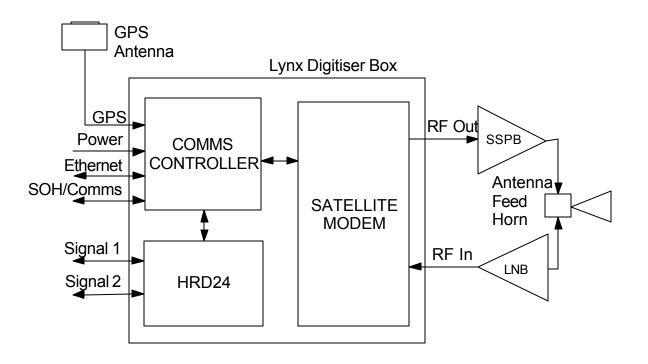


Figure 1: Lynx digitiser block diagram.

The Lynx Digitiser is packaged in a rugged waterproof and environmentally resistant steel box. All the connectors are situated on the front plate of the box as shown in the Figure 2.

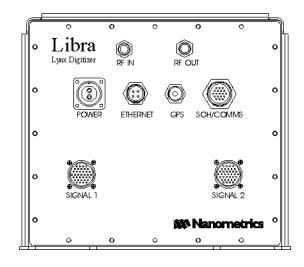


Figure 2: Lynx Digitiser front plate

# Specifications

Supply voltage: 11 - 16 VDC,

Power consumption: < 30 watts (complete system includes digitiser and GPS) Operating temperature: -20 to +55 degrees C Humidity 0 to 100%

# **HRD24 Module**

#### Operation

An important part of the Lynx Digitiser is a 24 bit High Resolution Digitiser module, hereafter the text referred to as "digitiser". It is a module which samples the seismometer output signal and assembles it into packets of a proprietary format. The digitiser will digitise from one to six channels of data with sample rates from 10 s/s to 1000s/s. However, the sample rate should be selected considering the throughput of the communication link

Data are assembled into packets with a CRC for error detection. Each packet includes a comprehensive header which holds parameters such as the packet sequence number, time in long seconds and the oldest packet available. See the appendix for more information on the data format.

The digitiser may have two software filters. The first filter is a decimating FIR (Finite Impulse Response) filter which is used for low pass filtering of the data. This is always required due to the nature of Delta-Sigma converters. The second filter is an optional IIR (Infinite Impulse Response) high pass filter to remove the DC offset from the data. Appendix D shows the corner frequencies of these software filters.

A GPS time reference provided by the comms controller module of the Lynx is used for time synchronization.

The SETUP menu is used to configure the digitiser parameters to suit the application and to store these parameters in the nonvolatile Flash memory chip. A full list of configurable parameters is given in the Configuring the Firmware chapter.

#### Time and output data timing

The digitiser keeps internal time which is referenced to a GPS clock. If the GPS clock is not locked the digitiser can free run on its own internal oscillator. When the GPS relocks, the digitiser will phase lock back onto the GPS time. All data from the digitiser is time stamped with the absolute UTC time.

#### Hardware description

This section gives a brief overview of the digitiser hardware. Later sections of the manual will define the software. The input impedance and digitiser sensitivities are user settable parameters which are set through one resistor respectively for each channel. The user should refer to the as-shipped data sheet to determine the actual values for these parameters.

#### **Differential Amplifier**

There is an input differential amplifier for each channel input signal. The gain of this stage is used to set the overall system sensitivity. Gains of between 1 and 256 are typical. A potentiometer is associated with each input and is adjusted to give maximum common mode rejection. The input impedance is usually left as a high impedance input (>50K). The gain and input impedance are user settable parameters which are set through one resistor respectively for each channel. The user should refer to the as-shipped data sheet to get actual values for the resistors.

#### Analog Anti-alias Filter

The anti-alias filter requirements are quite low due to the high input sample rate used with delta-sigma converters. The anti-alias filter is a 5th order Bessel filter to give linear phase response. A single operational amplifier generates the low pass poles. The filter has a gain of 1 and is configured for low noise.

#### Analog-digital Converter (ADC) & Digital Anti-alias Filter

A 120 dB Delta-sigma modulation ADC is used for conversion. This IC samples at a high rate, digitally filters and decimates the data, and then outputs the data to the DSP. The DSP further filters and decimates the data to achieve the desired resolution. Different sample rates are achieved by decimating to a greater or lesser extent. Delta Sigma ADC output one bit of data at a high rate which is filtered to produce higher resolution at lower sample rates. Sample rate is traded off for resolution. This works because the delta sigma modulator has all its quantization noise at frequencies which are later filtered out.

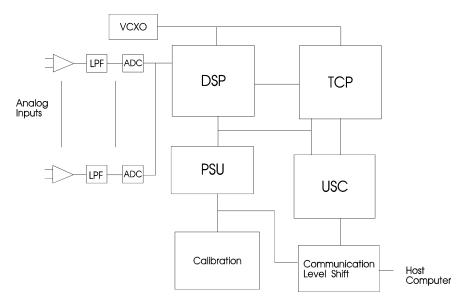


Figure 3: Block diagram of the digitiser module.

# DAC and Calibration (Optional)

Calibration signals are obtained from a laser-trimmed precision 12 bit D/A converter chip. Under software control, the calibration signal can be set to any value with a resolution of 1 in  $\pm$  2048. Full scale is usually  $\pm$  5V. Calibration relays switch the calibration signal to one side of the calibration coil. Another pole on the relay grounds the other end of the calibration coil when active. The as-shipped sheet specifies actual calibrator parameters. When determining sensor sensitivity, allowance must be made for the wire loop resistance and the calibration coil resistance.

# Output Ports

The internal hardware is controlled by ports on the TCP, several eight bit ports and some programmable logic. The TCP interfaces with the RS232 status bits and the universal serial controller (USC) for RS232 data.

When the calibration and/or active sensor control option is selected the TCP controls the calibration DAC and two eight bit control ports. This selects the calibration port, the calibration output signal level and frequency in addition to the active sensor control lines.

# State-of-Health

The digitiser monitors a number of analog state-of-health (SOH) channels, six 'slow' and three 'fast'. Three of the slow channels are used internally to monitor the input voltage, the internal temperature of the VCXO and the radio signal to noise ratio. The three 'fast' channels are used for sensor mass centering. The remaining channels are not used when the HRD is installed in a Lynx. The Lynx comms controller also monitors 3 external SOH channels, as discussed in the comms controller description.

The battery level monitor has a nominal sensitivity of 24.4 mV/bit, with an offset of +0.1V as a result of internal voltage drops.

The temperature monitors each have nominal input sensitivities of  $0.217^{\circ}$ C/bit with an offset of -61°C.

These SOH are typically sampled at 0.125Hz. The software controls how often they are logged.

The three FAST SOH channels are typically sampled at one Hz. These FAST SOH have an input range of  $\pm 10V$  and a sensitivity of 19.7mV/bit. An open input will appear as a 2.5V input. These inputs are used to monitor mass position in an active sensor.

The scale calibration factor is built from two constants. One is the actual sensitivity of the digitiser SOH which is expressed in millivolts per least significant bit and is a factory setting. The other constant is the sensitivity of the sensor. This might be expressed as "units" per volt. For example, with a temperature sensor, this might be set to 44 degrees Celsius per volt. Both of these parameters are set in the appropriate SOH Config menu.

The offset is used to allow for the sensor not producing zero output volts when registering zero "units". The offset is expressed in "units". For example, for a temperature sensor, the offset is expressed in degrees Celsius.

The appropriate scale and offset values for the internal SOH parameters are determined during the final test and are entered into the as-shipped configuration file. A hard copy of this file is shipped with the digitiser.

# Watchdog Timer

The main processor in the digitiser has a built-in watchdog timer that protects the digitiser from getting hung in an endless software loop. If for any reason the watchdog is not serviced by the software at the correct frequency, an automatic hardware reset signal is generated which restarts the entire digitiser.

#### RS232D I/O

When installed in a Lynx, the digitiser has two externally-accessible RS232 communications ports. One external port is reserved for digitiser configuration. The other provides the continuous stream of compressed seismic data for local monitoring. This compressed data is the same datastream which is transmitted via satellite to the central hub. The Lynx has two additional external serial data ports which are described with the comms controller board.

Note: RS232 convention states that:

- **}** 'MARK' or off = '1' = -ve voltage on signal line
- **}** 'SPACE' or on = '0' = +ve voltage on signal line

where all voltages are measured with respect to logic ground.

#### Flash Memory

A Flash memory chip is used to store both firmware and user parameters. The contents of this chip are read on system initialization to establish such parameters as sample rate. A menu driven interface is provided to change those parameters.

# CPU

The digitiser uses two separate processors, a Motorola DSP56002 and an Intel 80C196NT. The DSP interfaces to the ADCs and performs the digital filtering on the raw data. After filtering is completed the data is transferred to the 80C196NT. This processor collects a packet of data and generates the correct output format before transmitting the packet to the host. It also performs many other timing and housekeeping functions.

#### Internal Construction

The digitiser accepts Eurocard size boards. They plug into a custom back-plane. The chassis supports up to 6 cards. However, not all positions are populated at all times.

A minimum system (3 channel) consists of 5 cards: analog, TCP, communications, Mem-Cal and power supply. The analog board contains the front-end analog components and the interface between the DSP and the ADC. The TCP contains both processors, the USC, and SOH ADC circuits. The power supply contains a switching power supply. The Mem-Cal board contains RAM and calibration circuits. This RAM provides the retransmission buffer, and is configured according to network requirements.

A six channel digitiser has an additional analog board installed beside channels 1-3. A 1-3 channel ADC board is different from a 4-6 channel ADC board and they are not interchangeable, although they may be placed in either ADC slot. The board for channels 1-3 must be present at all times when the unit is running.

#### Internal batteries

A rechargeable lithium battery is used by the GPS engine to maintain its satellite almanac and other parameters and to run a low power real time clock. The lithium battery will maintain the GPS for 3 to 6 months

# Specifications

3 channels 24 bit. (6 channels optional)

132 db typical dynamic range as measured RMS to RMS

Operates with both active and passive sensors.

Selectable sample rates from 20 sps to 100 sps

First difference non-approximating data compression

Sample instant: simultaneous on all channels referenced to UTC

Optical isolation between seismic AD converter and VSAT transceiver.

# **Comms Controller Module**

# Operation

The comms controller board controls the flow of data traffic between the HRD24, LAN port and satellite link. It shares the same Lynx enclosure box with the HRD24 module and the Satellite Modem. The comms controller receives serial data from the HRD24 module in Nanometrics NMXP non-approximating compressed format, and encapsulates these in UDP/IP packets for transmission over the satellite link. It ensures that the appropriate time slot within the network TDMA scheme is used, as configured from the central site. Essentially the comms controller provides that each Lynx Digitiser can be considered as a remote node of a wide area network. There are a number of configurable parameters which control the operation of the Lynx Digitiser which can be accessed and controlled using the Libra User Interface, a user friendly GUI interface software package. For more details please refer to the separate Libra User Interface manual in the Software Reference Manual of the DSS Reference Manual.

The inbound (from remote to hub) packets are passed to the next module within the Lynx Digitiser - the Satellite Modem. The outbound retransmission request and control packets are received from the Satellite Modem and processed.

# Specifications

# User serial ports (optional)

Ports: 1

Serial data baud rate: asynchronous 1.2 to 19.2 kbps RS232. Serial ports can be configured for transparent full duplex serial or for data collection. In data collection mode, the Lynx packetizes and ringbuffers the serial data, supporting the retransmission protocol. Packet size can configured by stating bytes/packet or timeout (seconds/packet).

# Ethernet port

Ethernet port: User 10-based-T Ethernet port.

This port is used to locally monitor and control the Lynx. The Lynx can route IP packets between this port and the central site LAN.

# Precision timing subsystem

Digitally compensated crystal oscillator phase locked to GPS receiver

Eight channel GPS receiver with antenna

Precision UTC reference to control TDMA timing and digitiser sampling

No long-term timing or frequency measurement error

In the absence of GPS signal, provides typical 0.4 ppm over temperature range

# State-of-health channels & Remote site Log

Internal electronics module temperature

Battery supply voltage

Three external slow (sampled once every 8 seconds) SOH channels, 10-bit

Time variation (GPS time minus station time) at GPS lock

Phase lock loop status (locked, fine locked, free running)

GPS status (2D Nav, 3D Nav, searching, single satellite)

GPS location, Lat, Long and Elevation.

GPS # of satellites tracked and signal strength

Transceiver carrier & synthesizer lock

Outbound packet error rate

Eb/No figure of merit

# Calibration (optional)

Sinusoidal sensor calibration

User-programmable calibration waveform amplitude, frequency and duration

manual (from central site)

# Control

Supports Central Site control of transmit & receive frequency & transmitter power

Configuration, setup and status are accessible via local Ethernet port

Responds to remote assignment of TDMA slot and transmit interval and packet length

Transmitter shutdown on frame time error or self test failure.

Self test on startup

# Satellite Modem Module

# Operation

The Satellite Modem board provides the satellite communications interface, together with the SSPB and LNB modules mounted on the satellite antenna. The transceiver uses an efficient QPSK modulation which allows up to 112 kbps of data to be passed through a single 100 kHz satellite channel. It is designed to operate with any standard Ku-band geostationary communication satellite.

The modem provides fail-safe operation which is required by most satellite operators. The Lynx will automatically stop transmitting to the satellite if certain Lynx failure states are detected. This prevents the Lynx from interfering with other sites in the Libra network, or other satellite users. The Lynx will automatically turn off its transmitter if: its GPS receive loses lock and the frequency reference begins to drift, if an internal synthesizer loses lock, if the remote stops receiving authorizations from the central site (may indicate a misaligned remote antenna) or if the remote transmit power control fails. The Lynx will resume transmission if the error condition is cleared and the Lynx passes the appropriate self-tests.

# **Specifications**

Ku band operation, full duplex (other bands optionally available)

Transmit frequency 14.0 to 14.5 GHz

Receive frequency 10.95 GHz to 11.7 GHz

11.7 GHz to 12.2 GHz (factory option)

12.25 GHz to 12.75 GHz (factory option)

Carrier tuning step size: 100 Hz

Transmit frequency stability: +/- 2 KHz (other stabilities optional)

Spurious emissions: <4dBW / 4KHz, 14-14.5 GHz

Tx transmit level: 1W max, 5W typical operating, adjustable in 0.25 dB steps by remote control

Idle state emission: -50 dBc

Occupied bandwidth: 90 KHz typical, -26dB at +/- 50 KHz

Tx modulation: QPSK

Tx data rate: 64 Kbps using rate ½ FEC

112 Kbps using rate 7/8FEC

Rx demodulation: BPSK

Rx demod sensitivity: <10-5 BER at Eb/No=5.5 dB using rate  $\frac{1}{2}$  FEC

Rx data rate 32 Kbps using rate  $\frac{1}{2}$  FEC

This page intentionally left blank.

# 5. Getting Started

# Introduction

This section is intended to provide the information required to verify that the Lynx is performing correctly when received by the customer. Prior to proceeding with field installation, we recommend reading the entire manual before finalizing on the many options which are available to match the digitiser to the actual application.

# Installation

The Lynx Digitiser is mounted at the back of the satellite antenna and connected as shown in figure 3

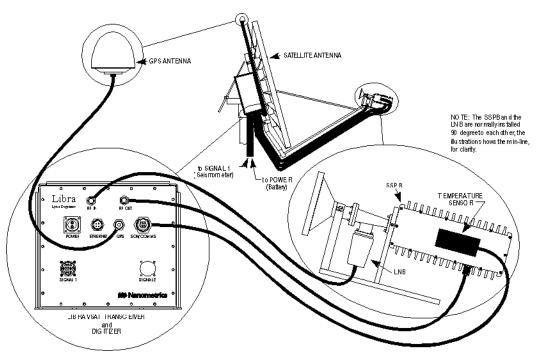


Figure 3: Figure 3: Lynx Digitiser installation

For more details on installation of the Lynx Digitiser please refer to the Libra Remote Site Installation Guide, a part of the system Reference Manual.

Wherever possible, the remote site systems should be temporarily installed and fully tested at the central site before the final remote site installation. This greatly simplifies configuration and installation activities.

# **Testing the Lynx Modules**

# Testing the digitiser module of Lynx

To get started you will need the equipment shown in the table below:

Quantity	Description
1	Power Supply, 10V-15V, 2A or 12V battery
1	IBM compatible personal computer (PC) with DOS, OS2 or WIN95/NT.
	This should include a VGA graphics adapter and an unused serial port
1	Seismometer or signal generator (optional)
1	Test cable (see appendix)
1	Satellite antenna

#### Table 1: Additional equipment required to get started

This startup procedure verifies that the digitiser is running and then displays waveform traces on the PC screen using the ViewDat test program.

Copy the files from the ViewDat installation disk to a new directory on your hard disk and make this the working directory. Connect the Lynx "HRD Data" port to the PC using a test cable. Connect the power connector of Lynx to a 12V DC power supply and power up the unit. Note: avoid connecting the Lynx to the satellite antenna until you are sure that it is properly configured. Refer to the Planning a Libra Network section of the Tech Administrator Manual.

Start ViewDat from the command prompt (see Appendix A).

Once the digitiser has finished its self test it will start outputting data through the serial port.

In the waveform display mode of ViewDat a trace for each active channel will appear on the screen. With no input signal connected to the Lynx signal input connector, you should see noise for all channels. To increase the sensitivity of the display and see the noise in more detail, change the scale factor of the screen display.

To check the Lynx using a signal generator connect the signal source to the digitiser using the pin-out given in Appendix A. Full scale voltage input will be  $+/-5.3 \times 10^5 S_D$  where  $S_D$  is digitiser input sensitivity in nV/bit as stated in the as-shipped sheet. Input impedance for the digitiser is also stated on the as-shipped sheet.

# Testing the Satellite Modem module of Lynx

This test verifies that data can be transmitted to the central site and the error correction and remote configuration features are operational.

To perform this test you need to have the acquisition centre installed and correctly configured. Start the acquisition server. Start the Waveform program on the acquisition computer and subscribe for traces from the Lynx being tested.

The Lynx must be installed on the satellite antenna and commissioned. The installation procedure is described in the Libra Remote Site Installation Guide, which is part of the Technical Administrator's Guide. Set up the Lynx following the instructions from the previous test. After startup you should see the incoming data displayed in the form of seismic traces in the Waveform window.

# Getting Started

Interrupt the transmission for 1 minute by breaking the Lynx-Central Site link. After reestablishing the link wait 30 seconds and perform a summary extract of the corresponding ringbuffers and save the result in a file. Wait 10 minutes and perform another summary extract. The first summary extract should show the created gap in the data. The second summary extract should show that the gap has been filled by retransmitted packets.

This page intentionally left blank.

# 6. Hardware Setup

# Introduction

This section of the manual describes how to configure the hardware and install the Lynx for field deployment. This section does not include instructions concerning radio tower, antenna, power supply system, seismometer or any other remote site hardware installation.

The sizes of the front panel connectors are different for each connector and they are provided with polarization control guidance. RF antenna, GPS antenna and power cables are included with the unit. Lynx to seismometer cables are either factory supplied or customer built depending on the contract. The signal connector pin assignments are described in Appendix A. Since the seismometer is third party hardware and it is not always supplied by Nanometrics the next paragraph includes instructions on how to configure and install the Lynx with different types of seismometers.

# Signal input

The Lynx input impedance may have been set at the factory to correctly damp the seismometers which are to be used. Please consult the as-shipped sheet to verify. If it is set at a high impedance level (20K) the user must either provide the correct external damping resistors or, alternatively, add the damping resistors to the empty resistor locations on the digitiser analog board.

If the calibration option has been installed, the Lynx can initiate calibration sequences on receipt of commands over an RS232 link.

If the seismometers are equipped with calibration coils, then the user should consider if additional pairs of wires should be used to connect the calibration coils to the Lynx. The connection to the digitiser depends on whether an active or passive sensor is used.

The calibration can be performed remotely from the acquisition system using the NAQSView software. For remote calibration the NAQS Server station file should be configured for the correct use of calibration and mass centre control relays and to include the calibration sensitivity, range, output impedance, etc. See the NAQS Server manual and Lynx as-shipped sheet for these information.

# Analog Input Characteristics

#### Input Impedance

The input impedance of the Lynx is normally set to suit the customer's sensors (see as-shipped sheet). The user may change the input impedance to dampen the seismometer response if desired. There is one resistor required for each channel to set the impedance.

The resistor value is determined by the desired input impedance and the parallel resistance of 5.0Mohms.  $R_{set} = (R_{damp} * 5 * 10^6) / (5 * 10^6 - R_{damp})$ . For most practical applications set the resistor value to the desired input impedance. The resistors to set are R85, R86, and R87 (on the ADC board #642) for channels 1-3 respectively. Please see the drawing in the servicing chapter for the location of these resistors. If the unit has six channels then channels 4-6 can be set in exactly the same way.

Input Sensitivity

The as-shipped input sensitivity of the Lynx is shown in the as-shipped sheets. The user may change the input sensitivity if desired. There is one resistor required for each channel to set the sensitivity.

gain = 1.275 uV/bit / desired sensitivity (uV/bit)Rgain = 2 \* 10e4 / (gain x 2 -1)

The maximum input voltage will be 40 Vpp/gain.

The sensitivity can be increased by soldering one resistor per channel onto the ADC printed circuit board. For example, to achieve an overall sensitivity of 192 nV per bit (old style), each gain-setting resistor should be set to 2.22K ohms. The gain resistor for channel 1 is R18, channel 2 is R19, and channel 3 is R60.

The resistors to set are on the ADC board drawing #642 for channels 1-3 respectively. If the unit has six channels then channels 4-6 can be set in exactly the same way.

# Sensor Interface

# Sensor Power

Unregulated +12V with current limited only by the external fuse is provided as a standard feature. Regulated sensor power is not provided as a standard feature but it is available as a no-charge factory option. +/- 12V at 10mA can be provided using 3 pins on the sensor connector which are reserved as follows:

+12V	Sensor	connector	pin	F
1011	~			-

- -12V Sensor connector pin E
- Gnd Sensor connector pin D

# Active Sensor Interface

The Lynx can optionally control active sensors such as the Guralp CMG-3T or Streckheisen STS-2 broadband seismometers. Refer to pinouts for connections.

The signal input impedance will be set to the high impedance state for this type of sensor.

Calibration	The calibration signal will be generated whenever calibration is enabled. There are three calibration enable signals intended to enable the internal relays of the seismometer. These signals are open drain signals that are active low. They can withstand voltages up to 20 Volts.
Mass Position Indication	The mass position indicators from the seismometer are connected to three of the SOH analog inputs in the digitiser.
Mass Locking/Unlocking	The masses may be locked or unlocked by the digitiser software. The digitiser generates the logic signals required to control the seismometer lock/unlock functions.
Mass Centring	The masses may be centred by the digitiser software. The digitiser generates the logic signals required to control the seismometer centring function.
6 Channel digitiser	Installation for 6-channel digitizers proceeds as for 3-channel units. Note that the 6-channel Lynx uses two sensor connectors each following the same pin-out. The front panel labels the connectors SIGNAL A and SIGNAL B respectively.

# Basic troubleshooting

#### Digitiser looks dead after power on

Check batteries. Check connections. Check fuses.

#### Unable to communicate with digitiser on startup

If the digitiser fails to send any data, carefully examine the terminal emulator (ZOC, ViewDat, ProcommPlus) output. If you see a message "Frame error" possibly accompanied by some garbage data, the digitiser is probably sending data at a different baud rate than that for which the digitiser test program is configured. Carefully check the factory documentation to determine for what baud rate the digitiser was configured.

#### Unable to communicate with Lynx on startup

If the Libra User Interface cannot communicate with the Lynx, verify that the IP communications is configured correctly. To confirm the Lynx ethernet port IP address, monitor the unit's "Controller Config" serial port with a terminal emulator (ZOC, ViewDat, ProcommPlus) during power-up. When the Lynx powers up, it reports many of its configuration parameters including the ethernet LAN port IP address and mask. The computer running the Libra User Interface must have an IP address which is part of the same IP subnet. The computer should be able to PING the Lynx LAN port and receive a response. Finally, valid user id and password must be entered in the Libra User Interface or the Lynx will deny access.

#### Noisy data

Is the data bad on all channels, or just one or two? If this is the case, you should carefully check the corresponding connections. Check to ensure that the channel responds to an input stimulus. (Disconnecting it, or lightly tapping the sensor should prove sufficient) Do one or more channels show a flat line? Do the state-of-health header fields indicate a problem with that channel? Try switching the sensors around to see if the problem stays with the same channel or moves.

#### **GPS not locking**

Most problems with the GPS engines can be traced to a poorly placed antenna. If the GPS is not receiving well, try repositioning the antenna to a more favourable location. Lastly, ensure that the antenna cable is not hanging from the antenna. Secure the antenna cable with a few tie wraps near the antenna to carry the weight of the cable.

The GPS should lock on its own if there is sufficient signal strength. If the GPS is not locking within 15 minutes of power-on, follow the procedure below:

- 1. Go to the GPS screen on ViewDat.
- 2. Examine the GPS status on the screen. Are any satellites being tracked?
- **3.** Examine the signal strength values. The signal strength (S/N) from the satellites should be greater than 38.
- **4.** Reposition the antenna to a better location.
- **5.** The GPS clock should lock now.

When the Lynx is integrated into a Nanometrics Digital Seismograph System, for further testing and troubleshooting procedures refer to the Remote Site Installation section of the system documentation.

This page intentionally left blank.

# 7. HRD24 Firmware Configuration

# **Overview**

This section of the manual provides you with the necessary information on how to configure the HRD24 module of the Lynx for your specific application. The Lynx as-shipped sheets contain all the important configuration parameters set before shipping. We would strongly advise recording any changes made to the configuration to facilitate troubleshooting and administration.

Information regarding the configuration of the comms controller board and satellite modem board can be found in the Libra User Interface section of the User Manual.

Configuration Parameters tell the HRD24 module how it should operate. There are two sets of configuration parameters:

- 1. Stored User Settings (those in Flash, saved from a previous session)
- 2. User Settings in RAM

#### Stored User Settings

Stored User Settings are User Settings that are stored into the Flash memory and do not lose their values even after power is switched off. The digitiser should be configured correctly when received.

User Settings in RAM

User Settings in RAM are read in by the digitiser on power-up from the Stored User Settings.

The User Settings in RAM are those that you are actually changing when you modify parameters. These settings may be saved for use by selecting 'P' from the main menu or discarded by selecting 'R' from the main menu or powering off the digitiser.

# Accessing the HRD24 Setup

To access the menu of parameters, connect the Lynx to a PC with a terminal emulator by connecting the "Digitiser Config" connector of the Lynx test cable to the PC COM port. Any terminal emulator such as ZOC, Procomm or Crosstalk can be used. Start the terminal emulator. The default communication parameters are 9600 or 38400bps, 8 bits, no parity, 1 stop bit, unless the user had previously changed these parameters. Upon startup, the following dialog should appear on the screen:

```
Tcp version 5.10, compiled Feb 20 1997 20:25:56

Press 'M 'key within 5 seconds or during memory test

Queue Event, empty

Queue Tx1, empty

Queue Tx2, empty

Queue Old, empty

Queue Junk, count = 191, head = 10000, tail = 3faf8

Channel 1, empty

Channel 2, empty

Channel 3, empty

Channel 4, empty

Channel 5, empty
```

```
Channel 6, empty
Channel Status, empty
Pointer Tx, empty
Memory Buffer, messages = 191
```

When these messages appear, type an 'm' or 'M' to access the Hrd24 menus. The Setup Menu (Main Menu) will then appear as follows:

#### **Orion / digitiser Setup Menu**

- C: Configuration menu
- U: Upload new firmware
- P: Program user settings
- R: Restart and run with saved settings

#### Menu Option:

If you wait more than 5 seconds, you will still have the ability to enter the menu again by pressing 'm' or 'M' anytime after the DSP starts digitizing data. At that point, the data flow will halt when you are in the menu and later resume again using the new parameters you have specified.

The sub-menus can be reached by pressing the corresponding key, for example: type 'C' to access the Configuration sub-menu. To exit from the Main Menu type 'R'. This allows the HRD24 to start normal data acquisition. To exit from any given sub-menu press the Escape key. This brings you back one level of menu. Typing a space or pressing the Enter key redisplays the current menu. The digitiser is not case sensitive.

If the startup message does not appear or is different then please consult the factory. The menus may also be remotely accessed via a dial-in modem, if the digitiser has been so configured.

# **Configuration Menus**

Since the HRD24 module is a part of other Nanometrics products, such as the Callisto (radio digitiser) or Orion (portable seismograph) it has the same user interface. The configuration menus allow the user to tailor the Lynx for a specific application. Care must be taken when configuring these parameters. Understand what a parameter does before changing it. Generally, the Lynx is pre-configured at the factory and the user should not have to modify the parameters in these menus.

After the digitiser has been reconfigured, the "Program user settings" option in the top-level Setup Menu must be selected to save the new configuration.

# Configuration Top Level Menu

All of the items in the main configuration menu are sub-menus.

#### digitiser Configuration Menu

- H: Edit hardware setup parameters
- I: Edit input sensitivity & impedance parameters
- G: Edit gps power cycling parameters
- S: Edit soh calibration parameters
- L: Edit log settings parameters
- D: Edit digitiser parameters
- P: Edit data port parameters
- O: Edit Orion specific parameters
- X: Edit temperature coefficients

# Configuration Submenus

#### Hardware Setup Menu

The parameters in this menu tell the software what hardware is in the digitiser. The serial number should not be changed unless some board swapping is done. The number of channels defines the number of physical ADC channels present. This is usually 3 or 6 channels. The number of memory banks defines the number of 256K blocks of memory present in the digitiser. For HRDs with no memory, this value is 0. For Orion this value is 8, and HRDs with expanded memory the value is 13. The PIC version number applies to the Orion only which is pre-configured and should not be changed. The last item sets the baud rate for the configuration port.

#### Hardware Setup Edit Menu

S:	Serial & model number:	153	4
C:	Number of channels:	3	
B:	Number of memory banks:	0	
P:	Pic version number:	2	
B:	Configuration Baud rate:	9600	
G:	Use 9600 baud for GPS	1	

# Input Sensitivity & Impedance Menu

The input sensitivity & impedance menu is used to store the ADC gain and damping resistor values. When you change the ADC gain and damping resistor values, update this table at the same time. It saves having to disassemble the Lynx in the future to determine the values. The first value is the sensitivity and the second value is the impedance as shown in the menu below. These

values are not used within the Lynx. On the Orion, these values are used by the Channel Sensitivity menu and should be set correctly.

#### Input Sensitivity & Impedance Menu

		sensitivity (nV/bit) i	mpedance (ohms)
1:	Channel 1:	1.000	1.000
2:	Channel 2:	1.000	1.000
3:	Channel 3:	1.000	1.000
4:	Channel 4:	1.000	1.000
5:	Channel 5:	1.000	1.000
6:	Channel 6:	1.000	1.000
A:	Channels 1-3		
B:	Channels 4-6		
C:	Channels 1-6		

#### GPS Power Cycling Menu

The GPS edit menu configures the power cycling parameters for the GPS engine. The GPS may have power cycling enabled (1) or disabled (0). If power cycling is disabled the GPS engine is on continuously (this is recommended for most digitiser applications). Power cycling is used to conserve power and trades off against timing accuracy. The power interval is the time between GPS power ups. Every 30 minutes is recommended. The maximum on duration is the time the GPS will remain on if it cannot lock (5 minutes is recommended).

#### **Gps Power Cycling Menu**

C:	Enable power cycling:	1
I:	Power interval (min):	60
D:	Maximum power duration (min):	10

#### SOH Calibration Menu

The SOH information is transmitted by the digitiser in a floating point format of user units such as temperature. This menu allows the user to set the conversion factors for the SOH values. The conversion factors are sensitivity (units/v) and offset (units) and the conversion formula is:

#### SOHValue = Sensitivity (units/v) \* value (V) + offset (units)

The value is a factory calibrated voltage measurement of the SOH input. The first value in the menu below is the sensitivity and the second is the offset.

#### **SOH Calibration Menu**

		Units Per Volt	Units Offset
A:	Fast soh 1:	1.000	0.000
B:	Fast soh 2:	1.000	0.000
C:	Fast soh 3:	1.000	0.000
1:	Slow soh 1:	1.000	0.000
2:	Slow soh 2:	1.000	0.000
3:	Slow soh 3:	1.000	0.000
F:	Fast soh 1-3		
S:	Slow soh 1-3		

#### Log Settings Menu

This menu sets how often the SOH information is recorded and transmitted. The verbosity sets the digitiser instrument log reporting detail. This should be set to normal (30). The verbose mode (31) is used for debugging only.

The fast and slow SOH interval sets how often the fast and slow SOH information is recorded and transmitted. This value is in seconds. Fast SOH can be sampled a maximum of once a second and slow SOH can be sampled a maximum of every 8 seconds. Typically, these values are set to once a

minute to once every 10 minutes. The setting will depend somewhat on the transmission link bandwidth.

#### Log Settings Menu

V:	Verbosity:	31
F:	Fast soh interval (sec):	60
S:	Slow soh interval (sec):	60
G:	Gps interval (sec):	60

#### Digitiser Menu

The DSP edit menu sets up the parameters associated with the seismic data channels. The number of channels is the transmitted number of channels. You can have a 3 channel digitiser and only transmit one channel of data. The sample rate may be any of the following sample rates:

10, 20, 40, 50, 80, 100, 125, 200, 250, 500, 1000 s/s

The DC removal may be enabled (1) or disabled (0). The DC removal filter is a first order IIR filter which is done after all the FIR filtering. The DC removal filter frequency may be set in the following range of 1 to 1000 milliHertz.

#### Digitiser Menu

C:	Number of channels:	1
S:	Sample rate:	100
D:	DC removal enabled:	1
F:	DC removal frequency (mHz):	50

# Data Communications Menu

This menu sets up the data port on the digitiser. The baud rate may be any of the standard baud rates and must be set to match the corresponding data port of the comms controller board. Note that the limitations of the telemetry channel should also be considered when selecting the baud rate. Changing the tx baud rate will change the rx baud rate also, and while a different rx baud rate may be specified this should not be done in Lynx units. Radio mode should be disabled (0).

The bundles per packet defines the length of the transmission packets. This allows the user to tailor the digitiser to the radio link. If the link is noisy then shorter packets are called for. If the link is quiet, the packet can be longer. Typically, 19 bundles/packet is used in most installations. See the data format section for more information on this. Since the satellite link supports 2 way communications, re-tx requests should be enabled (1) so the acquisition program can request missing data. The tx twice should be disabled (0). The tx twice delay (in seconds) can be left as default.

#### Data Port Menu

B:	Tx & Rx Baud rate:	9600	9600
N:	Bundles per packet:	19	
R:	Enable radio mode:	0	
X:	Enable re-tx requests	1	
2:	Enable tx twice:	0	
D:	Tx twice delay (sec):	60	

#### TCXO Calibration Menu

This menu is sets the temperature curve for the ADC crystal. The only time these values should be changed is when ADC or TCP cards are swapped between HRD's. DO NOT USE this menu otherwise. These coefficients are calibrated at the factory and should never need to be changed. Consult the factory for further details.

# **Temperature Coefficients Menu**

- U: Upload new coefficients
- I: Initialize coefficients
- C: Check coefficent checksum
- V: View coefficients

# Orion Specific Menu

In this menu, the Enable Orion mode must be set to 0. This puts the digitiser into digitiser mode. Do not change the other parameters.

# **Orion Specific Menu**

O:	Enable Orion mode:	0		
M:	Disk heat mode:	3		
H:	Minutes of heat per degree:	8		
R:	Safe disk temperature range (C):	5	50	
V:	Battery voltage levels:	12.25	11.5	10.9

# 8. Servicing

# Maintenance

#### Repair philosophy

Object is to troubleshoot to the board level and replace the board.

#### **Disassembly Instructions**

The following tools are required:

- 1. Phillips screwdriver for #4 and #8 screws.
- 2. 3mm Allen Key
- 3. SMA torque wrench
- 4. Adjustable wrench

#### Instructions:

- 1. Remove all power from the Lynx.
- 2. Remove the screws around the edge of the front plate.
- 3. Remove the card cage chassis from the can.
- 4. Disconnect the connectors from the card cage
- 5. Remove the screws holding the card cage front cover to the card cage

The cards may be removed from the card cage by extracting the cards.

#### **Assembly Instructions**

The assembly instructions are the reverse of the disassembly instructions. The coaxial SMA connectors must be tightened with a SMA torque wrench for correct operation.

# **HRD Configuration Port**

The HRD configuration port is a RS-232 port used for configuration and HRD firmware downloading. It is a three pin port: RX, TX, and GND. The port is on the SOH/communications connector:

ΤX	Pin H
GND	Pin T
RX	Pin G

Access to that port is enabled with the Lynx test cable through the connector marked "Digitiser Config".

See Appendix G for detailed pin assignment description of a factory test cable and other cables.

# Software & Firmware Updates

# HRD24 Firmware Update Procedure

New firmware is uploaded through the factory test port. See the section above for a description of the factory test port. This paragraph contains the necessary instructions for uploading new firmware. For step by step upload instructions refer to Appendix F of this manual.

- 1. Copy the firmware received on the update diskette to the PC's hard drive
- 2. Connect cable to factory test port via the communications connector.
- **3.** Connect the cable to a PC communications port.
- 4. Start a PC terminal emulator program.
- 5. Set baud rate to 9600, 8 data bits, no parity, 1 stop bit.
- 6. Disable all modem handshaking options like RTS/CTS, DSR, Xon/Xoff DCD detection
- 7. Power up the Lynx.
- 8. There should be a few beeps on the emulator then the text "TCP Version X.XX, compiled (date, time)

Press 'M' key within 5 seconds or during memory test". If this does not appear, then check connections and emulator settings. Note the firmware version and date at this point.

- **9.** Press the "M" key. A menu will appear when the memory test is complete. The memory test takes 15 seconds to complete.
- **10.** Press the "U" key to select the upload new firmware option.
- **11.** From the terminal emulator, initiate an ASCII upload of the new hex file on the update diskette.
- 12. The firmware is uploaded into the Lynx. This will take about 1 minute. When the upload is complete, a message "upload completed, programming flash" will appear. A few seconds later the flash will be programmed and the Lynx will reboot. The text for the TCP version will appear again and it should display the new firmware version and date. At this point the firmware upload procedure is complete. The Lynx is now ready for use. If the download fails, a download error message will be displayed. You should try downloading again.

# Comms Controller Firmware Update Procedure

Comms Controller firmware update can be done using Libra User Interface. For more details please refer to the separate Libra User Interface manual in the Software Reference Manual of the DSS Reference Manual.

NEVER power down the Lynx while it is doing a upload. This will have catastrophic results.

### **Internal Configuration Options**

### Related to the seismometer input

#### Input Impedance

The ADC board provides space for an optional input shunt resistor which can be used to damp a seismometer. Calculate the required damping resistor value using instructions provided by the seismometer manufacturer. 'Active' seismometers such as the Guralp CMG40 should be used with no damping resistor.

The input impedance of the Lynx is normally shipped in a high impedance state (see as-shipped sheet). The user may change the input impedance to dampen the seismometer response if desired. There is one resistor required for each channel to set the impedance.

The resistor value is determined by the desired input impedance and the parallel resistance of 5.0 Mohms. Rset = (Rdamp \* 5 \* 10e6) / (5 \* 10e6 - Rdamp). For most practical applications set the resistor value to the desired input impedance. Figure 9.2 shows the location of the damping resistor for each channel. The damping resistor for channel 1 is R85, channel 2 is R86, and channel 3 is R87. The resistors are located on the ADC board for channels 1-3 respectively. If the unit has six channels then channels 4-6 can be set in exactly the same way.

#### Input Sensitivity

The as-shipped input sensitivity of the Lynx is shown in the as-shipped sheets. The user may change the input sensitivity if desired. There is one resistor required for each channel to set the sensitivity.

The resistor value is determined by the following formulae:

gain = 1.275 uV/bit / desired sensitivity (uV/bit)Rgain = 2 \* 10e4 / (gain x 2 -1)

The sensitivity can be increased by soldering one resistor per channel onto the ADC printed circuit board. For example, to achieve an overall sensitivity of 192 nV per bit, each gain-setting resistor should be set to 1.62K ohms. Figure 9.2 shows the location of the gain-setting resistor for each channel. The gain resistor for channel 1 is R18, channel 2 is R19, and channel 3 is R60. The resistors to set are on the ADC board for channels 1-3 respectively. If the unit has six channels then channels 4-6 can be set in exactly the same way.

Note with no gain resistor installed, the gain = 0.5 and the sensitivity = 2.55 uV/bit

The input impedance should be left in the high impedance state.

Seismometer	Input Sensitivity	Input Gain	Input Gain Resistors	System Sensitivity
CMG40T	800 nV	1.6	9.09K ohms	1nm/s
CMG40T	2550 nV	1	none	3.186 nm/s

#### Table 2: Configuring the ADC for CMG40T active seismometer.

#### Configuring for an active seismometer with mass position monitoring

The first step required when connecting to an active seismometer is setting the input sensitivity and input impedance of the ADC. The input sensitivity would either be chosen to give a system sensitivity of 1nm/s or to set the full scale levels of the seismometer and the Lynx to be the same. Connection to an active sensor (such as CMG40T) will consist of connecting the main sensor coil to the signal inputs with the positive (+) coil connected to the positive (+) input and negative (-) to negative (-). Connect the '+' calibration output to the motor coil '+' and the '-' calibration output to

### Servicing

the motor coil return. The output impedance of the calibration signal is 500 ohm with a maximum current of 10mA at a voltage of 5V. A series resistor is used on the calibration '+' outputs to ensure the current is limited to this value. This is not a factor with active sensors since they buffer the calibration signal internally.

The best performance will be found using cables built in the following manner:

The connection to each sensor should be made with a 6 pair, double shielded with individual internal shielding, 24 AWG (or smaller) cable. An example cable of this type would be Belden 8166. The inner shields of the cable should be connected only at the connector and the sensor end should be left open. The inner shield should be kept isolated from the outer shield. The outer shield should be connected to the chassis ground and to the sensor chassis ground. If the sensor has a ground pin the connection can be done using that pin, however if there is no ground connection (i.e.. SS1 sensor) then the chassis connection should be made by connecting to the shell of the connector with as short a connection length as possible. A second cable should be connected directly from the battery to the CMG40T for the power connection.

See the next section to configure for passive seismometer calibration with current calibration drive.

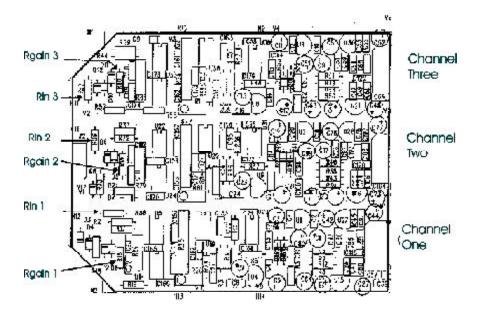


Figure 4: Position of gain and damping resistors on the ADC board.

### Configuring for a passive seismometer

The first step required when connecting to a passive seismometer is setting the input sensitivity and input impedance of the ADC. The input sensitivity would normally be chosen to give a system sensitivity of 1nm/s. The input impedance should be set to a value to give the critical damping resistance of the seismometer.

Seismometer	Input Sensitivity	Input Gain	<b>Gain Resistors</b>	Input Impedance
Geotech S13	378 nV	3.37	3.48K ohms	5360 ohms
Kinemetrics SS1	159 nV	8.02	1.33K ohms	4220 ohms
Mark Prod. L4C	170.1 nV	7.49	1.43K ohms	8870 ohms

#### Table 3: Configuring the ADC board for passive seismometers.

Connection to a passive sensor will consist of connecting the main sensor coil to the signal inputs with the positive (+) coil connected to the positive (+) input and negative (-) to negative (-). Connect the '+' calibration output to the motor coil '+' and the '-' calibration output to the motor coil return. The output impedance of the calibration signal is 500 ohm, with a maximum current of 10mA at a voltage of 5V. A series resistor is used on the calibration '+' outputs to ensure the current is limited to this value.

The best performance will be found using cables built in the following manner:

The connection to each sensor should be made with a 2 pair, double shielded with individual internal shielding, 24 AWG (or smaller) cable. An example of this type of cable would be Belden 8162. The inner shields of the cable should be connected only at the connector and the sensor end should be left open. The inner shield should be kept isolated from the outer shield. The outer shield should be connected to the chassis ground and to the sensor chassis ground. If the sensor has a ground pin the connection (i.e. SS1 sensor) then the chassis connection should be made by connecting to the shell of the connector with as short a connection length as possible.

#### **User Configurable Jumper Settings**

Mem-Cal:				
J3	1-2	Calibration Enable = $+5V$		
J3	2-3	Calibration Enable = $+12V$		

### Factory configured jumpers

The HRD is configured using jumpers on various boards. The function of all the jumpers is explained in the following tables. Please see the as-shipped sheets for the actual jumper settings. Note that where applicable, jumper pin 1 has a square pad. The following jumper settings are set at the factory. These jumpers should never be changed. They are listed here for reference only. User configurable jumpers are considered under the function in which the jumper is referenced.

ADC 1-3:		Mem-Cal:			
Jumper	Setting	Function	Jumper	Setting	Function
J3	1-2	PS_SYNC	J5	1-2	Voltage Calibration
J6	5-6	Channel 1 Address	J4		Not Used
J7	1-2	Channel 2 Address	J7		Not Used
J8	1-2	Channel 3 Address	J6	2-3	SOH1 = Mass POS 1
J10-J18	2-3	Time Slot			
ADC 4-6:			TCP:		
Jumper	Setting	Function	Jumper	Setting	Function
J6	3-4	Channel 4 Address	J5	1-2	USCA CLK
J7	2-3	Channel 6 Address	J6	1-2	USCB CLB
J8	2-3	Channel 6 Address	J11	1-2	Flash Program

COMMS:					
Jumper	Setting	Function	Jumper	Setting	Function
J3A	1-2	Event_In CMOS Level	J3B	5-6	Event_In CMOS Level
J4A	2-3	Event_Out CMOS Level	J4B	5-6	Event_Out CMOS Level
J5A	2-3	RX232	J5B	5-6	CTS232
J6A	2-3	TX232	J6B		N/A
J7A			J7B	3-4	RTS232
J7C			J12A	1-2	AUX_CLK
J12B	5-6	USCA_RI			
		s ()	(		
			19 H 2		



*Figure 6: Pin-out for J12, J3, J4, J5, J6* 


### Standard seismometer configurations

	Sonngarationo
Kinemetrics Ranger	
	Generator constant 345 volt-seconds/metre
	Gain set to 8.02 with 1.33K ohm gain set resistor
	Damping set to 4200 ohms with damping resistor
	Configure for current drive with no mass position monitoring
	System sensitivity 1 nanometre per second per bit
Mark Products L4C	
	Generator constant 276.4 volt-seconds/ metre
	Gain set to 7.49 with 1.43K ohm gain set resistor
	Damping set to 8870 ohms with damping resistor
	Configure for current drive with no mass position monitoring
	System sensitivity 1 nanometre per second per bit
Geotech S13	
	Generator constant 629 volt-seconds/ metre
	Gain set to 3.37 with 3.48K ohm gain set resistor
	Damping set to 5340 ohms with damping resistor
	Configure for current drive with no mass position monitoring
	System sensitivity 1 nanometre per second per bit
Guralp CMG40T	
	Generator constant 800 volt-seconds/ metre
	Gain set to 1.6 with 9.09K ohm gain set resistor
	Damping set to open circuit with no damping resistor
	Configure for voltage drive with mass position monitoring
	System sensitivity 1 nanometre per second per bit OR
	Generator constant 800 volt-seconds/ metre
	Gain set to nominal with no gain set resistor
	Damping set to open circuit with no damping resistor
	Configure for voltage drive with mass position monitoring enabled
	System sensitivity 3.186 nanometres per second per bit

# **Appendix A - Connector Pinouts**

Two versions of Lynx chassis exist: RevC chassis (SSPB temperature sensor connections through COMMUNICATIONS connnector) and RevE chassis (with additional SSPB temperature sensor connector). The pinouts are otherwise identical.

### Callisto/Lynx

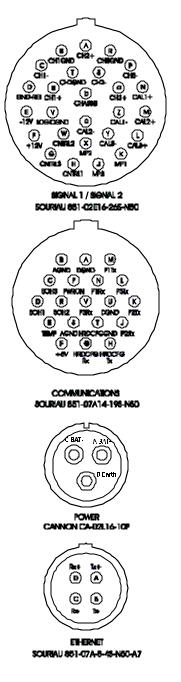

	LYNX	CALLISTO
HRD-CONFIG (Rx.Tx.GND)	YES	YES
P1 (Rx,Tx,GND)	INTERNAL DATA (HRD-DATA)	HRD-DATA
P2	EXTERNAL DATA	RADIO DATA
(Rx.Tx.GND)	(HRD GPS DATA)	(RETX REQUEST)
P3 (Rx IX)	CONTROLLER CONFIG	NO CONNECTION
90H [1,2,8,AGND]	YES	YES
TEMP (TEMP)	YES	NO CONNECTION
PWRON	YE8	NO CONNECTION
POWEROUT (PWRGND)	<b>+</b> 5∨	+12V OR BATTERY



Figure 7: Connector Pinouts

This page intentionally left blank.

## **Appendix B - Libra Data Format**

### Introduction

Libra networks use a variety of data formats and protocols to support a wide range of communications services. The principle protocols used are:

NMXP Used to pass data between ringbuffers

UDP Used to carry NMXP data between programs

IP Used to carry UDP packets between nodes in the network (i.e. from Lynx to NAQS).

These protocols work together. NMXP packets are encapsulated (carried) within UDP packets, and UDP packets are carried within IP packets. The beauty of this approach is that the outer IP (Internet Protocol) packet is universally recognized, and can carry the seismic data payload through almost all communications media: through the Internet, through telephone lines, through LAN (Local Area Network) networks, through almost any modern communications facility. This allows Nanometrics networks to easily merge with the customer's communications infrastructure.

#### IP

IP (Internet Protocol) packets carry data from one network node to another. The IP header identifies the source and destination node addresses. All remote site data (seismic, SOH, serial) is encapsulated in IP packets and these are transmitted by the satellite link to the central site acquisition systems.

### TCP and UDP

These are the most common Internet protocols: Transmission Control Protocol and User Datagram Protocol. They are used to transfer data from one software process to another. Libra networks use UDP to carry ringbuffer, SOH and authorization data. TCP is used by the Libra User Interface software to carry configuration commands to the equipment. TCP and UDP are commonly encapsulated within IP packets, forming TCP/IP and UDP/IP.

### NMXP

The Nanometrics Transfer Protocol (NMXP) is used to carry data to the NAQS acquisition software systems. This protocol is specifically designed to support acquisition: sequential packet numbering (permitting retransmission request), identification of the oldest buffered packet (allowing remote site retransmission buffers of any size: seconds to days), and data source and format details.

The NMXP protocol is described below. Information about hternet Protocols (TCP/IP and UDP/IP) can be found in most modern networking texts.

### The NMXP packet

This data transmission format facilitates the transfer of compressed seismic data along with a wide variety of status information from an instrument to a central site. It supports error free transmission of data using retransmission requests of bad packets. It also supports polled networks. The data format requires that the instrument have an accurate time source (i.e. GPS) for time tagging the data prior to compression and transmission. The compression algorithm is based on taking the first difference of the data and packing the data into bytes, words, or long words . This algorithm achieves about 1.3 bytes per sample at maximum compression.

Most of the status messages can be transmitted at a user defined frequency. This allows the user to tailor ratio of data to status information. This is important on limited bandwidth or noisy transmission mediums. The status information in data format is expandable. As new status information messages are created, they can be added to the data format without affecting the existing information.

Lastly, the data format is simple to implement on small microprocessors. The compression algorithm is simple and requires little memory and processing power.

The following objectives were used in designing the data format:

- 1. support compressed data
- 2. support retransmit of packets for error correction
- **3.** support polled networks
- 4. compatible with Orion
- 5. simple compression/decompression algorithm
- **6.** simple to implement
- 7. expandable
- 8. programmable frequency for status information
- 9. not wasteful of bandwidth

### **Description of NMXP Packets**

All the data (seismic and status data) is gathered into sequenced and time stamped packets. These packets start with a synchronization word plus an Old packet available word and finish with a CRC. The packets consist of 17 byte 'bundles' of data. Each bundle is an independent collection of data. Each packet contains a time stamp bundle followed by n data bundles where n is odd. In order to word align packets, an odd number of bundles is used. This principally benefits the TCP.

The number of bundles in a packet is a programmable parameter. The number of bundles is odd and has a range of 1-255. This allows the packet size to be tailored to the data link. The packet size should be optimized for the data link. Short packets should be used on noisy, error prone data links. Packets may be the same size for the entire network, or different on each branch (a branch is connected to one RM-4 port or one Libra remote serial port) of the network. All instruments on a given branch must use the same packet size. Short messages must be padded out to the packet size. Outgoing packets may have a different packet size.

In summary:

- **}** a channel is a unique stream of information
- **}** an instrument may transmit 1 or more channels of information
- **}** a packet contains information from only one channel
- } a packet is a uniquely identifiable collection of information that is transmitted
- **}** packets are a configurable fixed size
- } a branch connects 1 or more instruments to one port on the RM-4
- } "outgoing" is the direction from the central site to remote site, "incoming" is the opposite
- } all instruments on a branch use the same incoming packet size
- } all instruments on a branch use the same outgoing packet size
- **}** outgoing packets do not have the Oldest packet word
- } incoming packets contain data, status, or configuration information
- **}** outgoing packets contain retransmit requests, or configurations
- **}** all data is represented in the little endian format (intel format)

### **CRC for the Packets**

For simplicity CRCs should be an addressable data size, i.e. 8, 16 or 32 bits. Sending 32 bits (4 bytes) is too much overhead, 8 bits is not sufficient. Therefore select 16 bits as the CRC size.

There are 2 good common standard 16 bits polynomials, the CRC-16 and the 16 bit CRC-CCITT. The reversal of these polynomials are also known to be good and are also used. The digitiser uses the 16 bit CRC-CCITT. Therefore select the 16 bit CRC-CCITT as the CRC polynomial.

On the bit level CRCs can be calculated from either end. Normally CRCs are calculated most significant bit first, i.e. the byte 0xD5 is done 11010101. Reflected CRCs are calculated least significant bit first, i.e. the byte 0xD5 is done 10101011. Bits of a byte are transmitted over a serial link least significant bit first. Most CRCs calculated for transmission over a serial link are done least significant bit first. The digitiser uses a reflected CRC algorithm. Therefore, select a reflected CRC algorithm to be used.

If the accumulated CRC value is 0, it is unaffected by the 0 byte and errors may not be detected. The CRC should not be initialized to 0 if messages contain leading 0s may occur. Since the receiver syncs on a non-zero sync word, this is not a problem if these bytes are included. The digitiser uses 0xFFFF as its initial value for the CRC. Therefore, select 0 as the initial value for the CRC.

If the CRC is sent as is, the accumulated CRC value afterwards is then 0. This can pose problems if messages have the CRC and trailing 0s; see above. Modifying the CRC before transmitting it has little to gain and complicates matters. The Orion XORs the CRC with 0xFFFF before transmitting it and checks for 0xF0B8 on receive. Therefore, select transmitting the CRC as is.

```
#define CrcUpdate(usCrc,ubByte) \ ((usCrc) >> 8) ^ ausCrcTable [((usCrc) &
Oxff) ^ (ubByte)]
SendByte (ubByte)
{
       usCrc = CrcUpdate (usCrc,ubByte);
       UscTx = ubByte ^ ubScramble;
}
RecvByte ()
{
       ubByte = UscRx ^ ubScramble;
       usCrc = CrcUpdate (usCrc, ubByte);
       return ubByte;
}
SendMsg (pubData)
{
       usCrc = 0;
       SendByte (ubSync1);
       SendByte (ubSync2);
       SendLong (ulOldestSequenceNumber);
       for (us = 0; us < usNumberMsqByte, us ++)</pre>
       SendByte (pubData [us]);
       usCrc2 = usCrc;
       SendWord (usCrc2);
}
RecvMsg (pubData)
{
       while (1)
       {
              while (1)
              {
```

## Appendix B - Libra Data Format

```
while (1)
                     {
                           usCrc = 0;
                           if (RecvByte() == ubSync1)
                                  break:
                    if (RecvByte () == ubSync2)
                           break;
             }
             ulOldestSequenceNumber = RecvLong ();
             for (us = 0; us < usNumberMsqByte, us ++)</pre>
                    pubData [us] = RecvByte ();
             usCrc2 = usCrc;
             if (usCrc2 == RecvWord () && usCrc == 0)
                    break;
       }
}
unsigned short ausCrcTable[256] ={
  0x0000, 0x1189, 0x2312, 0x329B, 0x4624, 0x57AD, 0x6536, 0x74BF, 0x8C48,
0x9DC1,
  0xAF5A, 0xBED3, 0xCA6C, 0xDBE5, 0xE97E, 0xF8F7, 0x1081, 0x0108, 0x3393,
0x221A,
  0x56A5, 0x472C, 0x75B7, 0x643E, 0x9CC9, 0x8D40, 0xBFDB, 0xAE52, 0xDAED,
0xCB64,
  0xF9FF, 0xE876, 0x2102, 0x308B, 0x0210, 0x1399, 0x6726, 0x76AF, 0x4434,
0x55BD,
  0xAD4A, 0xBCC3, 0x8E58, 0x9FD1, 0xEB6E, 0xFAE7, 0xC87C, 0xD9F5, 0x3183,
0x200A,
  0x1291, 0x0318, 0x77A7, 0x662E, 0x54B5, 0x453C, 0xBDCB, 0xAC42, 0x9ED9,
0x8F50,
  0xFBEF, 0xEA66, 0xD8FD, 0xC974, 0x4204, 0x538D, 0x6116, 0x709F, 0x0420,
0x15A9,
  0x2732, 0x36BB, 0xCE4C, 0xDFC5, 0xED5E, 0xFCD7, 0x8868, 0x99E1, 0xAB7A,
0xBAF3,
  0x5285, 0x430C, 0x7197, 0x601E, 0x14A1, 0x0528, 0x37B3, 0x263A, 0xDECD,
0xCF44,
  0xFDDF, 0xEC56, 0x98E9, 0x8960, 0xBBFB, 0xAA72, 0x6306, 0x728F, 0x4014,
0x519D,
  0x2522, 0x34AB, 0x0630, 0x17B9, 0xEF4E, 0xFEC7, 0xCC5C, 0xDDD5, 0xA96A,
0xB8E3,
  0x8A78, 0x9BF1, 0x7387, 0x620E, 0x5095, 0x411C, 0x35A3, 0x242A, 0x16B1,
0x0738,
  0xFFCF, 0xEE46, 0xDCDD, 0xCD54, 0xB9EB, 0xA862, 0x9AF9, 0x8B70, 0x8408,
0x9581,
  0xA71A, 0xB693, 0xC22C, 0xD3A5, 0xE13E, 0xF0B7, 0x0840, 0x19C9, 0x2B52,
0x3ADB.
  0x4E64, 0x5FED, 0x6D76, 0x7CFF, 0x9489, 0x8500, 0xB79B, 0xA612, 0xD2AD,
0xC324.
  0xF1BF, 0xE036, 0x18C1, 0x0948, 0x3BD3, 0x2A5A, 0x5EE5, 0x4F6C, 0x7DF7,
0x6C7E,
  0xA50A, 0xB483, 0x8618, 0x9791, 0xE32E, 0xF2A7, 0xC03C, 0xD1B5, 0x2942,
0x38CB,
  0x0A50, 0x1BD9, 0x6F66, 0x7EEF, 0x4C74, 0x5DFD, 0xB58B, 0xA402, 0x9699,
0x8710,
  0xF3AF, 0xE226, 0xD0BD, 0xC134, 0x39C3, 0x284A, 0x1AD1, 0x0B58, 0x7FE7,
0x6E6E,
  0x5CF5, 0x4D7C, 0xC60C, 0xD785, 0xE51E, 0xF497, 0x8028, 0x91A1, 0xA33A,
0xB2B3,
```

# Appendix B - Libra Data Format

	0x5BCD,	0x6956,	0x78DF,	0x0C60,	0x1DE9,	0x2F72,	0x3EFB,	0xD68D,
0xC704, 0xF59F,	0×E416.	0x90A9,	0×8120,	0xB3BB.	0xA232.	0x5AC5.	0x4B4C.	0x79D7.
0x685E,		,	,	,	,	,	,	
Ox1CE1, OxBOA3,	0x0D68,	0x3FF3,	0x2E7A,	OxE70E,	0xF687,	0xC41C,	0xD595,	0xA12A,
•	0x93B1,	0x6B46,	0x7ACF,	0x4854,	0x59DD,	0x2D62,	0x3CEB,	0x0E70,
0x1FF9,	0	0	00514	0	0 7 0 0 0	00000	00220	07007
Oxf78F, Ox6A4E,	UXE606,	0xD49D,	UXC514,	UXBIAB,	UXAU22,	UX92B9,	UX8330,	UX/BC/,
0x58D5,	0x495C,	Ox3DE3,	)x2C6A, (	)x1EF1, 0	x0F78			
};								

## **Outgoing Packets**

All outgoing packets are a fixed size of 30 bytes. There are no retransmit requests from the destination for outgoing packets.

The basic format is as follows:

2 bytes	Synchronization Word $=$ AA BB
2 bytes	Instrument ID (5 bits model type, 11 bits serial number)
4 bytes	Long Seconds
1 byte	Packet Type
3 bytes	Packet Information Header
4 x 4 bytes	Data Section
2 bytes	Packet CRC

### Retransmission Request by Sequence Number Packet

Packet type = 1
Channel
Spare
Sequence number 1 requested
Sequence number 2 requested
Sequence number 3 requested
Sequence number 4 requested

### Retransmission Request by Sequence Number Range Packet

1 byte	Packet type $= 2$
1 byte	Channel
2 bytes	Spare
4 bytes	First sequence number requested
4 bytes	Last sequence number requested
8 byte	Spare

### digitiser Calibration Packet

1 byte		Packet Type = 6
1 byte		Channel Mask (ch 1, 2, 3, 4 = 1, 2, 4, 8)
2 bytes		Spare
4 bytes	us-int32	Start Time (long seconds)
4 bytes	float	Frequency in Hz ( $0.01 \le \text{freq} \le \text{sample rate} / 2$ )
4 bytes	float	Amplitude in Volts ( $0 < amp \le 5.0$ )
2 bytes	us-int32	Duration in seconds (0 < duration <= 3600)

### **Incoming Packets**

All incoming packets consist of a synchronization pattern, oldest packet available for a data stream, time stamp bundle, n other bundles, and a CRC:

2 bytes	Synchronization Word
4 bytes	Oldest Packet Available for a Data Stream
17 bytes	Packet Header Bundle
17 * n bytes	n bundles where n is odd
2 bytes	Packet CRC

### Compressed Data Packet

A data packet always consists of a time stamp bundle followed by n data bundles (where n is user defined). A time stamp bundle contains a sequence number, the time of the first sample, instrument ID (model and serial number), sample rate of packet and channel number, and the first sample.

### Compressed Data Packet Header Bundle

1 byte	Packet type = 1 (bit $5 = 1$ is for retransmit)
4 bytes	Long seconds
2 bytes	Sub-seconds in 10,000th of a second
2 bytes	Instrument ID [5 bit model type, 11 bit serial number]
4 bytes	Sequence Number
1 byte	Sample Rate, Channel # [5 bits for sample rate, 3 bits for channel #]
3 bytes	X0 (first sample)

The instrument ID defines the instrument type transmitting the channel of data. Currently the following instrument IDs are defined:

0	IMP
0	HRD
1	Orion
2	RM3
3	RM4
4	Lynx
5	Cygnus
6	Callisto
7	Carina
8-31	Reserved for future use

The sample rate is an enumerated value. The table below defines the different sample rates:

0	reserved	6	40 s/s	12	250 s/s
1	1 s/s	7	50 s/s	13	500 s/s
2	2 s/s	8	80 s/s	14	1000 s/s
3	5 s/s	9	100 s/s	15	25 s/s
4	10 s/s	10	125 s/s	16	120 s/s
5	20 s/s	11	200 s/s	17-31	reserved for future use

### Data Bundle

A data bundle contains between 4 and 16 compressed samples of data. The samples are compressed using a first difference algorithm. The data is compressed as byte, word, or long differences. Each set of four bytes contains either 4 byte differences, 2 word differences, or 1 long

## Appendix B - Libra Data Format

difference. The compression bits indicate how each set of 4 bytes is packed. For each 4 byte set there are 2 compression bits. The compression bits are packed into a byte as follows:

byte :	ww xx yy zz	where the comp	ression bits indicate:
	ww-data set 1	00	not used
	xx- data set 2	01	byte difference
	yy- data set 3	10	word difference
	zz- data set 4	11	long difference

The format of the data bundle is as follows:

1 byte	Compression Bits
4 bytes	Compressed data set 1
4 bytes	Compressed data set 2
4 bytes	Compressed data set 3
4 bytes	Compressed data set 4

### Null Bundle

This bundle is provided to pad out packets. The first occurrence of a Null bundle indicates that there is no further data in the packet. The null bundle contains no useful information. The receiver should disregard this bundle and all remaining bundles, and skip to the next packet.

1 byte	Bundle Type = 9
16 bytes	Filler

### Filler Packet

A filler packet is required for radio links. Non-zero data must always be transmitted by radios. To accomplish this the instruments transmit filler packets whenever there is no data to transmit. Repeaters discard received filler packets and generate their own filler packets for transmission. This method is required because a repeater can also multiplex.


The only valid data in a filler packet is the bundle type. The rest of the packet is filled a value that is good for radio transmission (to be defined)

### Filler Packet Header Bundle


1 byte	Packet type = 9 ( bit $5 = 1$ is for retransmit)
16 bytes	defined as filler characters


### Note : scrambler default is 0xA5

The following is a graphical illustration of an incoming data stream, containing only data packets and filler packets. An actual data stream will also have state-of-health packets.

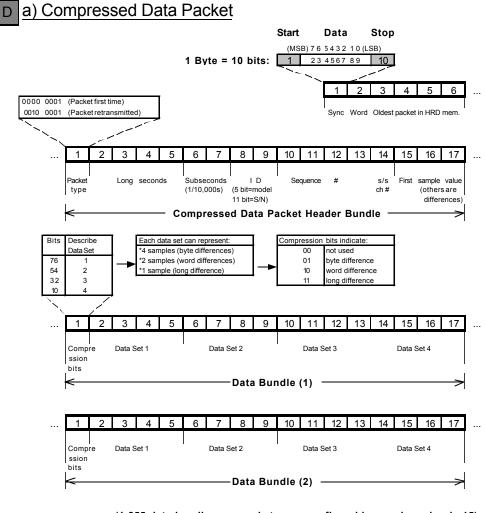



(1-255 data bundles per packet, user configurable; good number is 15)

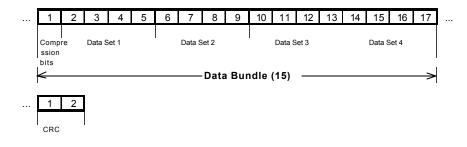

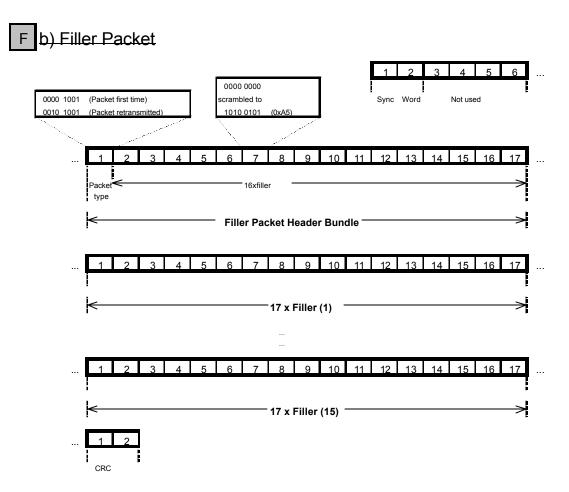

## **Bandwith Estimate Example**

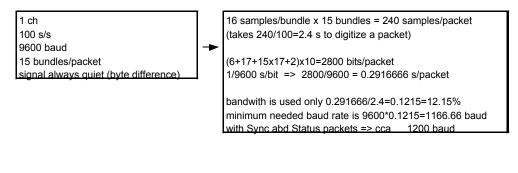



### **Status Packet**

A status packet consists of a status time stamp bundle followed by n status bundles. A status time stamp consists of a sequence number, the time (nominal time when the packet was created), instrument ID (model and serial number).

Status bundles have a general format that is outlined below:

1 byte	bundle type = $xx$
4 bytes	Long seconds
12 bytes Defined	by the specific bundle type
or	
1 byte	bundle type = $xx$
16 bytes Defined	by the specific bundle type

### State-of-Health Packet Header Bundle

1 byte	Packet type = 2 (bit $5 = 1$ is for retransmit)
4 bytes	Long seconds
2 bytes	Sub-seconds in 10,000th of a second, this value always 0
2 bytes	Instrument ID [5 bit model type, 11 bit serial number]
4 bytes	Sequence Number
4 bytes	Reserved for future use

The instrument ID defines the instrument type transmitting the channel of data. Currently the following instrument IDs are defined:

- 0 HRD
- 1 Orion
- 2 RM3
- 3 RM4
- 4 Lynx
- 5 Cygnus
- 6 Callisto
- 7 Carina
- 8-31 Reserved for future use

### Fast External State-Of-Health Bundle

1 byte	bundle type = 32
4 bytes	long seconds
4 bytes	float of calibrated fast SOH1 in volts or units
4 bytes	float of calibrated fast SOH2 in volts or units
4 bytes	float of calibrated fast SOH3 in volts or units

Slow External State-Of-Health Bundle

- 1 byte bundle type = 33
- 4 bytes long seconds
- 4 bytes float of calibrated slow SOH1 in volts or units
- 4 bytes float of calibrated slow SOH2 in volts or units
- 4 bytes float of calibrated slow SOH3 in volts or units

Digitiser Slow Internal SOH Bundle

1 byte bundle type = 34

## Appendix B - Libra Data Format

bytes	long seconds		
bytes	float of battery voltage measured at PSU in volts		
bytes	float of VCXO temperature in degrees Celsius		
bytes	float of radio SNR in xxxx		
Time Quality B	undle		
byte	bundle type = 39		
bytes	long seconds		
bytes	GPS on time		
bytes	GPS off time durin	ng the last cycle	
bytes	GPS time to lock in	n seconds	
bytes	Time difference at	t lock in counts (divide by 3.84 to get microseconds)	
bytes	VCXO offset (div.	by 16 to get the DAC offset)	
byte	Reason GPS turne	d off:	
	0	-PLL finished correcting time error	
	1	-GPS on time expired	
byte	Final GPS mode:		
	0	-3D navigation	
	1	-2D navigation	
		-tracking 1 sat or more	
	3	-searching for satellites	
D Calibration Bu	Indle		
byte	Bundle type $= 7$		
bytes	Long seconds		
bytes	VCXO value		
bytes	Time difference at	t lock in counts (divide by 3.84 to get microseconds)	
bytes	Time Error (in cou	ints)	
bytes	Frequency Error (	in counts/sec or counts/ 16 secs)	
bytes	Crystal temperatur	re	
byte	PLL Status?( 1=fir	ne locked, 2=coarse locking, 3=temp. ref, gps off, 4=temp	
	ref, gps on)		
byte	GPS Status(0=3D,	1=2D, 2=1 sat, 3=search, 4= gps off, 5-6=gps error)	
	bytes bytes bytes <b>Time Quality B</b> byte bytes by	bytes float of battery vo bytes float of VCXO ten float of VCXO ten float of VCXO ten float of radio SNR Time Quality Bundle byte bundle type = 39 bytes long seconds bytes GPS on time bytes GPS off time durin bytes GPS off time durin bytes VCXO offset (div. byte Reason GPS turne 0 1 byte Final GPS mode: 0 1 byte Final GPS mode: 0 1 byte Bundle type = 7 bytes Long seconds bytes VCXO value bytes Time difference at bytes Frequency Error ( bytes Frequency Error ( bytes Crystal temperatur byte PLL Status?( 1=fin ref, gps on)	

### Null Bundle

This bundle is provided to pad out packets. The first occurrence of a Null bundle indicates that there is no further data in the packet. The null bundle contains no useful information. The receiver should disregard this bundle and may skip to the next packet.

1 byte	Bundle Type = $9$
16 bytes	Filler

### Min-Max1 Bundle

The activity indicator provides a 1 Hz or slower filtered summary of a seismic data channel. This would be used to provide the end user with a summary of the collected data. This allows the user to quickly browse large quantities of data for events. The data may be filtered using a 5th order filter. The filter may be low pass, high pass, or band pass. In order not to lose the higher frequency information, the minimum and maximum over the interval of the filtered signal is stored. The interval is a programmable value of 1s or greater.

1 byte	Bundle type = $10$
4 bytes	Long seconds
3 bytes	Filtered min. over 1st interval
3 bytes	Filtered max. over 1st interval
3 bytes	Filtered min. over 2nd interval
3 bytes	Filtered max. over 2nd interval

### Min-Max2 Bundle

The activity indicator provides a 1 Hz or slower filtered summary of a seismic data channel. This would be used to provide the end user with a summary of the collected data. This allows the user to quickly browse large quantities of data for events. The data may be filtered using a 5th order filter. The filter may be low pass, high pass, or band pass. In order not to lose the higher frequency information, the minimum and maximum over the interval of the filtered signal is stored. The interval is a programmable value of 1s or greater.

1 byte	Bundle type = $11$
4 bytes	Long seconds
3 bytes	Filtered min. over 1st interval
3 bytes	Filtered max. over 1st interval
3 bytes	Filtered min. over 2nd interval
3 bytes	Filtered max. over 2nd interval

### Instrument Log Bundle

Any errors or warnings generated by the instrument are stored in this bundle. Some typical errors or warnings are GPS locked/unlocked, low battery, clock adjustments, external events, self test errors, status of disk space, duty cycle, etc.

1 byte	Bundle type = $12$
4 bytes	Long seconds
2 bytes	Error code, where bits $0-11 = \text{error code}$ , bits $12-15 = \text{data format}$ ,
2 bytes	Error Level
8 bytes	Error Parameters
Error Level is a b	it manned value which is broken down as follows:

Error Level is a bit mapped value which is broken down as follows:

bits 0-7	Area (each bit identifies a separate area)- currently unused
bits 8-10	Processor (TCP, Aux, DSP)
bits 11-15	Error Level (Fatal, error, warning, info, debug

### **GPS Location Bundle**

This bundle contains the latitude and longitude of the instrument's GPS antenna. This bundle has a programmable measurement frequency. The latitude and longitude is stored in an extended floating point format.

1 byte	Bundle type $= 13$
4 bytes	Long seconds
4 bytes	Latitude
4 bytes	Longitude
4 bytes	Elevation

### GPS Satellite Status/Reference Time Error Bundle

This bundle contains the status of the GPS engine's satellite tracking channels. It records the signal to noise ratio, activity, and satellite number for the five satellite tracking channels. The activity indicates whether the GPS channel is idle, searching or locked to a satellite signal. This information is very useful in diagnosing a GPS engine that is not locking.

1 byte	Bundle type $= 15$	
4 bytes	Long seconds	
2 bytes	Status bits (see Rockwell	manual, contains operating mode, figure of merit)
10 bytes	GPS Satellite Channel - 2b	ytes per channel
	where the 2 bytes are defi	ned:
	bits 0-4	Satellite PRN code (0-31)
	bits 5-7	Unused
	bits 8-13	Signal to Noise Ratio (0-63)

### bits 14-15

Activity 0=idle, 1 searching, 3=tracking

### D1 (Early) Threshold Trigger Bundle

The D1 threshold trigger bundle reports the start of a threshold trigger event. It is sent at a programmable time after the start of a trigger. It reports the start time of the trigger, along with some statistics about the trigger. The D1 trigger bundle is followed by a D2 trigger which reports the end of a trigger. The D1 bundle contains the peak amplitude, the half period of the amplitude, and the samples after trigger of the peak amplitude.

1 byte Bundle type = 20

4 bytes	Long seconds

- 2 bytes Sub-seconds in 10,000th of a second
- 2 bytes LTA value (low word of LTA which is a long, hi word in D2)
- 2 bytes Half period of peak amplitude
- 2 bytes Samples after trigger of peak amplitude
- 1 byte Channel# (3 bits) | trigger # (5 bits)
- 3 bytes Peak amplitude

### D2 (Late) Threshold Trigger Bundle

The D2 threshold trigger bundle reports the end of a threshold trigger event. It is sent at a programmable time after a trigger is finished. It reports the end time of the trigger, along with some statistics about the trigger. The D2 bundle contains the peak amplitude, the half period of the amplitude, and the samples after trigger of the peak amplitude for the entire trigger event.

1 byte	Bundle type = 21
4 bytes	Long seconds
2 bytes	Sub-seconds in 10,000th of a second
2 bytes	LTA value (hi word of LTA which is a long, low word in D1)
2 bytes	Half period of peak amplitude
2 bytes	Samples after trigger of peak amplitude
1 byte	Channel# (3 bits)   trigger # (5 bits)
3 bytes	Peak amplitude

### D1 (Early) STA/LTA Trigger Bundle

The D1 STA/LTA trigger bundle reports the start of a STA/LTA trigger event. It is sent at a programmable time after the start of a trigger. It reports the start time of the trigger, along with some statistics about the trigger. The D1 trigger bundle is followed by a D2 trigger which reports the end of a trigger. The D1 bundle contains the peak amplitude, the half period of the amplitude, and the samples after trigger of the peak amplitude.

1 byte	Bundle type = $22$
4 bytes	Long seconds
2 bytes	Sub-seconds in 10,000th of a second
2 bytes	LTA value (low word of LTA which is a long, hi word in D2)
2 bytes	Half period of peak amplitude
2 bytes	Samples after trigger of peak amplitude
1 byte	Channel# (3 bits)   trigger # (5 bits)
3 bytes	Peak amplitude

### D2 (Late) STA/LTA Trigger Bundle

The D2 STA/LTA trigger bundle reports the end of a STA/LTA trigger event. It is sent at a programmable time after a trigger is finished. It reports the end time of the trigger, along with some statistics about the trigger. The D2 bundle contains the peak amplitude, the half period of the amplitude, and the samples after trigger of the peak amplitude for the entire trigger event.

1 byte	Bundle type = $23$
1 hutes	Long seconds

## Appendix B - Libra Data Format

- Sub-seconds in 10,000th of a second 2 bytes 2 bytes LTA value (hi word of LTA which is a long, low word in D1) 2 bytes Half period of peak amplitude 2 bytes Samples after trigger of peak amplitude Channel# (3 bits) | trigger # (5 bits) 1 byte 3 bytes Peak amplitude Event Bundle 1 byte Bundle type = 244 bytes Long Seconds 4 bytes End Time in Long seconds Cause (1=external, 2=internal, 4=manual (calibration)) 1 byte 1 byte Trigger Flags (1 bit per trigger, LSB = trigger 0)
  - 6 byte Spare

The Lynx instrument log provides a record of the normal ongoing operation of the instrument, as well as specific incidents which may affect data quality or timing. The Lynx generates 5 different categories of message:

Information	Document the normal operation of the Lynx.
Warnings	Minor incidents which may slightly affect data quality or timing.
Errors	Incidents which may result in significant loss of data.
Fatal Errors	Serious malfunctions of the Lynx.
Debug Info	Verbose trace messages.
-	

This is a complete list of the messages generated by the Lynx digitiser. Some of the messages in this list are relevant only to a Lynx digitiser running in Orion mode. All the messages that reference the "AUX" should never occur while running in Lynx mode.

### Informational Messages

Message 1039:	DSP diag RC=r cnt=n.
	The DSP diagnostics returned the value r on the nth time run. This is an informational message if r is 0 and a warning message otherwise.
Message 1041:	TCP turn LEDs on.
	The TCP turned on the LEDs after detecting a user button press.
Message 1042:	TCP turn LEDs off.
	The TCP turned off the LEDs after powering off the AUX or after 5 minutes of no user activity.
Message 1054:	Recording Started.
	Data recording has started as requested by the AUX.
Message 1055:	Recording stopped.
	Data recording has stopped as requested by the AUX.
Message 1056:	Window started ssss-eeee.
	The recording window from time ssss to time eeee has started.
Message 1057:	Window ended ssss-eeee.
	The recording window from time ssss to time eeee has ended.
Message 1060:	Pll fine locked.
	The TCP is phase locked. It is using the average of several seconds of GPS messages. The absolute time error is less than 10 microseconds.
Message 1061:	Pll coarse locking.
	The TCP is phase locking, skewing the time to the correct.
Message 1068:	GPS lost navigation.
	The GPS engine is not able to generate a navigation solution using the satellites in view.
Message 1069:	GPS gain navigation.
	The GPS engine is now able to generate a navigation solution using the satellites it is tracking.
Message 1070:	User button pressed.
	The TCP detected a user button press. The next message indicates the action taken which is turning on the LEDs or powering on the AUX.

Message 1072:	GPS power on.
-	The TCP powered the GPS on so that it can correct its internal time.
Message 1073:	GPS power off.
	The TCP powered the GPS off after it had corrected its time to within 1 microsecond or after the maximum on time had elapsed.
Message 1075:	Disk heater on, dd seconds, tt C.
	The TCP powered the disk heater on to warm it up in preparation of starting the AUX processor. There are dd seconds of memory left and the current disk temperature is tt degrees Celsius.
Message 1076:	Disk heater off, dd seconds, tt C.
	The TCP powered the disk heater off after warming it up in preparation of starting the AUX processor. There are dd seconds of memory left and the current disk temperature is tt degrees Celsius.
Message 1079:	Disk temperature tt C.
	The temperature of the disk cartridge has passed one of the safety limits to tt degrees Celsius. If the disk is too hot or too cold the AUX processor may not work correctly. The disk may be heated to within temperature specifications or these limits may be disregarded.
Message 1080:	GPS engine state sssss.
	The GPS engine state has changed to sssss, which is one of the following:
	SearchThe GPS engine is searching for satellites.TrackThe GPS engine is tracking at least one satellite.2D NavThe GPS engine is navigating in 2D, constant altitude.3D NavThe GPS engine is navigating in 3D.
Warning Messages	
Message 1024:	TCP version m.nn. The TCP startup message with version number m.nn.
Message 1025:	Clock zap sss, mmm
	The internal time of TCP has changed by sss seconds and mmm milliseconds. A discontinuity in data timing will result.
Message 1026:	TCP rx msg=mmm, st=xx.
	The TCP received the unexpected message mmm from the AUX while in state xx.
Message 1039:	DSP diag RC=r cnt=n.
	The DSP diagnostics returned the value r on the nth time run. This is an informational message if r is 0 and a warning message otherwise.
Message 1043:	GPS error, ssss.
	The TCP detected an error in the reception of messages from the GPS. The error ssss is one of the following:
	Missing No GPS was detected at startup.
	OverrunA byte was not received in time.FrameA byte was received with an invalid stop bit.
	Parity A byte was received with an invalid stop bit.
	InvSync A message header had an incorrect sync word.
	HdrCs A message header had an incorrect checksum.
	DataSize A data message had an invalid length.

	DataCs BufFull	A data message had an incorrect checksum. The GPS message buffer was full.
Message 1044:	GPS lost loc	k.
		s lost lock; its time is unreliable. The TCP is no longer using the se locking its time.
Message 1045:	GPS gain loo	sk.
		s gained lock; its time is now valid. The TCP is once again using phase locking its time.
Message 1046:	GPS online.	
	Messages an	re now being received from the GPS.
Message 1047:	GPS offline,	rebooting.
		s not received a valid message from the GPS in over 10 s. Power s turned off immediately and back on in 10 s.
Message 1049:	TCP rx err le	n=nnn, xxxx
		ceived an invalid message from the aux of length nnn. The status ne serial port was xxxx.
Message 1050:	Inv msg len	exp nnn got mmm.
		ceived an invalid message length from the aux. The message said bytes; instead it received mmm bytes.
Message 1052:	Config save	d ok.
	-	ration was saved successfully. The TCP is now rebooting to configuration.
Message 1062:	Battery volt	age, nn.nn.
	-	oltage has changed over a battery voltage threshold value. The age reading is nn.nn volts.
Message 1066:	Rx invalid co	onfig
		ceived an invalid configuration from the AUX. The TCP is and continuing to run with its current configuration.
Message 1071:	PLL did not	fine lock.
		is on for its maximum allowed duration before it could correct its within 1 microsecond. The GPS is being turned off anyway.
Message 1074	Using xxxx	power source.
	mains/charg	witched the source of its input voltage. The Orion will use the ger power supply if present, otherwise it will use the external has not been discharged, in which case it will use the internal
Message 1077	Disk remove	ed.
	processor w	has detected that the disk cartridge has been removed. The AUX rill not be booted until after it has been inserted. If it is not fore running out of memory, data will be lost.
Message 1078	Disk inserte	d.
	The Orion h	has detected that the disk cartridge has been inserted.
Message 1081:	GPS time en	for sss, mmm.
		reporting the digitiser time is incorrect by sss seconds and mmm s. This error must remain stable for some time before the digitiser

		will accept it as correct. If the time error is 0, this indicates that the GPS is no longer indicating that the digitiser time is incorrect.
	Message 1082:	Digitiser time valid.
		The digitiser time is now accepted as correct and the GPS must indicate the same error for a prolonged period for it to be accepted. Any large errors in the GPS time are corrected by resetting the GPS engine.
	Message 1083:	Digitiser time invalid.
		The GPS engine has repeatedly indicated that the digitiser time is wrong so the digitiser will believe it and proceed as on startup.
	Message 1085:	Charger mode mmmm.
		The internal disk charger is now on either a slow charge or off, indicated by mmmm.
Error Messa	ages	
	Message 1034:	DSP send cmd not ready.
		The TCP tried to send a command to the DSP but it was not ready to receive one. The TCP will restart the DSP to ensure proper acquisition.
	Message 1035:	DSP send cmd failed.
		The TCP sent a command to the DSP which it did not acknowledge as completed. The TCP will restart the DSP to ensure proper acquisition.
	Message 1036:	DSP send word not ready.
		The TCP tried to send a word to the DSP but it was not ready to receive one. The TCP will restart the DSP to ensure proper acquisition.
	Message 1037:	DSP send word failed.
		The TCP sent a word to the DSP which it did not acknowledge as received. The TCP will restart the DSP to ensure proper acquisition.
	Message 1038:	DSP read word not ready.
		The TCP tried to read a word from the DSP but it was not ready to send one. The TCP will restart the DSP to ensure proper acquisition.
	Message 1040:	DSP startup failure.
		The TCP failed to download the runtime code to the DSP.
	Message 1053:	Config failed to save.
		The configuration failed to save. The TCP is continuing to run with its current configuration.
	Message 1065:	Mem bank invalid m of n
		A memory check detected an error in memory bank m. The memory was configured to use n memory banks.
	Message 1067:	DSP invalid bundle xxxx.
		The TCP received an invalid bundle from the DSP. The TCP is ignoring this bundle and is allowing the DSP to continue to digitise.
Fatal Error	Messages	
	Message 1029:	TCP: AUX time out.
		The AUX is not communicating with the TCP. This results in the TCP cycling power to the AUX. If the communications problem repeats, the TCP will also reboot itself.

Message 1048:	DSP time out, restarting
	The DSP has not sent a valid message to the TCP in over 2 s. The DSP will be restarted.
Message 1051:	Mem corrupt in ffff.
	A memory buffer corruption was detected in function ffff. The TCP is rebooting.
Message 1059:	Mem pointer invalid, xxxxxx.
	The TCP detected the invalid pointer xxxxxx in the memory buffer.
Message 1084:	Main loop stopped, rebooting.
	The TCP detected that the main processing loop is no longer running. It is rebooting to recover.

The TCP may also report any message as a Fatal Message if on startup it finds an invalid memory buffer but a valid message. This message is sent as a Fatal Message to possibly help explain why it rebooted.

### Verbose Trace (Debug) Messages

Message 1058:	TCP got AUX msg xxx.
	The TCP received the message xxx from the AUX.
Message 1063:	Event started n trigs, m.
	The event detector has declared the start of an event with n triggers; m is a bitmask indicating which triggers were on at the time.
Message 1064:	Event ended n trigs, m.
	The event detector has declared the end of an event with n triggers; m is a bitmask indicating which triggers were on at the time.

This page intentionally left blank.

## Appendix D - Filter Response Plots, Poles & Zeroes

### Response

Analog signals connected to the Lynx are low pass filtered using a three stage anti-alias filter before being sampled at 240 kHz. This data is later low pass filtered and decimated using a 3 to 5 stage FIR filter to give the output sample rate. Depending on the requested sample rate different filters are used and different number of filter stages are required. The output bandwidth will always be 0.4 x F sample out.

The low frequency response is also configurable using the DC removal IIR filter. With no filter the response is to DC. With the DC removal filter enabled it can be set to a number of predetermined frequencies depending on the customers' application.

### **System Filter Values**

### Transfer Functions

The transfer functions of all the components in the Lynx are as follows:

### Analog Low Pass Anti-alias Filter

5th order Bessel Low-pass

$$F(s) = \frac{\omega_1^2 \omega_2^2 \omega_3}{(s^2 + \frac{s\omega_1}{Q_1} + \omega_1^2)(s^2 + \frac{s\omega_2}{Q_2} + \omega_2^2)(s + \omega_3)}$$

Note: 1. Damping and Q are related by the expression 
$$D = 1/2Q$$

2. The complex frequency response is obtained by substituting  $s=-j\omega$ 

**Digital FIR Low-pass** 

$$y(n) = \sum_{i=0}^{N-1} c(i) *x(n-i)$$

Optional Digital IIR High-pass.

$$y(n) = K \times [x(n) - x(n-1)] + F_1 \times y(n-1)$$

Digital Response (Time Domain Difference Equations)

- $\mathbf{x}(n)$  is current sample
- **}** x(n-1) is previous sample, etc.
- $\mathbf{y}(n)$  is the output sample
- **}** y(n-1) is the previous output sample
- **}** c(i) is a FIR coefficient
- **}** N is the number of coefficients
- **}** K is the filter gain (see coefficients for calculation of value)
- **F**<sub>1</sub> is the filter coefficient (see coefficients for calculation of value)

### Coefficients

The values for all the coefficients for these transfer functions and for the different sample rates are:

### 5th Order Bessel Analog Low-pass Filter

 $\begin{aligned} f_{3db} &= 1500 \text{Hz} \\ \omega_1 &= 14713 \\ \omega_2 &= 16594 \\ \omega_3 &= 14202 \\ Q_1 &= 0.916478 \\ Q_2 &= 0.563536 \end{aligned}$ 

Zeros	None	
Poles	-2077.65 -2077.65 -1440.9 -1440.9 -2260.35	1080.15 -1080.15 2213.4 -2213.4 0.0

### **Digital FIR Filters**

The individual digital filter stages and associated decimation for each output sample rate is indicated below:

				Stage		
Sample Rate		1	2	3	4	5
	Coefficient set	1	2	9	8	10
10	# of Coefficients	34	30	256	110	256
	Decimation	5	3	4	10	5
	Coefficient set	1	2	9	5	10
20	# of Coefficients	34	30	256	56	256
	Decimation	5	3	4	5	5
	Coefficient set	1	2	3	7	10
40	# of Coefficients	34	30	118	36	256
	Decimation	5	3	2	5	5
•	Coefficient set	1	2	3	8	3
50	# of Coefficients	34	30	118	110	118
	Decimation	5	3	2	10	2
	Coefficient set	1	2	7	10	
80	# of Coefficients	34	30	36	256	
	Decimation	5	3	5	5	
	Coefficient set	1	2	3	5	3
100	# of Coefficients	34	30	118	56	118
	Decimation	5	3	2	5	2
•	Coefficient set	1	1	5	3	
120	# of Coefficients	34	34	56	118	
	Decimation	5	5	5	2	
	Coefficient set	1	2	9	3	3
125	# of Coefficients	34	30	256	118	118
	Decimation	5	3	4	2	2
	Coefficient set	1	2	3	10	
200	# of Coefficients	34	30	118	256	
	Decimation	5	3	2	5	
	Coefficient set	1	2	3	9	
250	# of Coefficients	34	30	118	256	
	Decimation	5	3	2	4	
	Coefficient set	1	2	3	3	
500	# of Coefficients	34	30	118	118	
	Decimation	5	3	2	2	
	Coefficient set	1	2	3		
1000	# of Coefficients	34	30	118		
	Decimation	5	3	2		

*Note:* The following sets of filter coefficients are symmetric, so only the first half of each coefficient set is unique.

### FIR 1 Filter

### Coefficients:

	coefficients.			
126102308-01        17666850E-01        16153700E-01        26318100E-02           .26016630E-01         .6803870E-01         .11598610E+00         .15223440E+00           FIR 2 Filter        65579140E-04         .18999690E-03        48271860E-04         .12167770E-02           .24576070E-02        25570410E-03         .64952830E-02         .12149770E-01           .54490100E-02        2557260E-01        46964620E-01        27110750E-01           .6565070E-01         .20294310E+00         .30618330E+04        27110750E-01           .35569670E-04        23775850E-04        57189790E-05         .34235910E-04           .35510890E-04        23775850E-04        57189790E-05         .34235910E-04           .35510890E-04        23775850E-04        23787890E-03        14823580E-03           .12752530E-03         .12775610E-04         .33559670E-04         .33559670E-04           .1385250E-03         .12775810E-02         .3263280E-03        121470E-03           .121627708E-02         .12745010E-02         .3253280E-03        12363570E-02         .3855970E-04           .1385280E-03         .12766400E-02         .1314520E-02         .86895340E-02        32533910E-02           .3635230E-01         .15189370E-02	.37887750E-04	.19972690E-03	.59127680E-03	.11983370E-02
.26016630E-01         .68053870E-01         .11598610E+00         .15823440E+00           FIR 2 Filter				
.18304990E+00         FIR 2 Filter         .65879140E-04       .189999690E-03       .48271860E-04       .12167770E-02         .24576070E-02       .556870410E-03       .64952830E-02       .12249710E-01         .54490100E-02       .21592960E-01       .46964620E-01       .27110750E-01         .656570E-01       .20294310E+00       .30618330E+00       .27110750E-01         .65665070E-04       .23775850E-04       .57189790E-05       .34235910E-04         .30510890E-04       .43931380E-04       .74450120E-03       .11221470E-03         .2175250E-03       .1277510E-02       .23787890E-03       .11221470E-03         .12572530E-03       .72734340E-03       .12936810E-03       .93176250E-03         .15257250E-03       .12577850E-02       .3127160E-02       .33271760E-02         .65527430E-02       .4209940E-03       .25042740E-02       .43635570E-03         .105557010E-02       .3124520E-01       .9599080E-02       .3271760E-02         .2657430E-02       .5124640E-02       .1314520E-02       .6605340E-02         .18525810E-02       .7070760E-02       .3223910E-02       .32799080E-02         .18525810E-01       .151893730E-02       .46643590E-01       .19045860E-02       .5799080E-03         .14170540E-01				
FIR 2 Filter           Coefficients:           .658791402=04         .18999690E=03         .48271860E=04         .12167770E=02           .24576070E=02         .256807010E=01         .21592960E=01         .21592960E=01           .65655070E=01         .20294310E+00         .30618330E+00         .27110750E=01           .65655070E=04         .23775850E=04         .57189790E=05         .34235910E=04           .01069050E=04         .23775850E=04         .25250920=03         .112214700E=03           .3264820E=03         .12775610E=04         .2250920E=03         .11221470E=03           .2481280E=03         .1275610E=04         .2250920E=03         .93176250E=03           .12572530E=03         .72734340E=02         .13156850E=02         .832830E=03           .12572530E=03         .7273430E=02         .31243130E=02         .8325810E=03           .10083210E=02         .1070760E=02         .314520E=02         .33271760E=02           .3063330E=02         .7093310E=02         .12595930E=01         .39059990E=02           .653520E=01         .20608240E=01         .20677420E=01         .39059990E=02           .653520E=01         .1040840E=03         .22462550E=03         .63905204E=01           .12177828080E=02         .57342100E=04         .11411210E=02		.68053870E-01	.11598610E+00	.15823440E+00
Coefficients:        48271860E-04        12167770E-02          24576070E-02        56870410E-03        64952830E-02        12949710E-01          54490100E-02        21592960E-01        46664620E-01        27110750E-01           .65665070E-01        20294310E+00        3618330E+00        27110750E-01           .65665070E-04        23775850E-04        57189790E-05        34235910E-04           .01049050E-04        23775850E-04        74450120E-04        33569670E-04           .13262920E-03         .12775610E-04        20250920E-03        11221470E-03           .1227530E-03         .2730920E-03        23787890E-02        41822980E-03           .1257530E-03         .72734340E-03         .12936810E-03        93176520E-03           .1257530E-03         .10165270E-02         .131450E-02         .4822980E-03           .18237780E-02         .4109940E-02         .1314520E-02         .8805340E-02           .306108320E-03        79983710E-02         .41534900E-02         .8223310E-02           .26257430E-03         .1519370E-02         .2042150E-01         .95799080E-02           .2094260E-01         .20608240E-01         .20677420E-01         .95799080E-02           .2094260E-01         .1040840E-0				
65879140E-04        18999690E-03        48271860E-04        12167770E-02          24576070E-02        21592960E-01        64952830E-02        27110750E-01          5665070E-01        20294310E+00        30618330E+00        27110750E-01          30510890E-04        23775850E-04        57189790E-05        34235910E-04          30510890E-04        43931380E-04        74450120E-04        336670E-04          30520920E-03        2775610E-04        20250920E-03        12221470E-03          24881280E-03        2730920E-03        2377850E-04        93176520E-03          12572530E-03         .12157250E-03        1225750E-03        93176520E-03          12572530E-02        1077660E-02         .1314450E-02        8763280E-02          30083210E-02        10737660E-02        131450E-02        8223910E-02          30083210E-02        1023140E-02        1214770E-02        8232990E-02          16935298E-01        1594560E-02        32519510E-01        31693590E-02          16935298E-01        1594560E-02        3529990E-02        3529990E-02          16935298E-01        1594560E-02        5734200E-03        39792020E-01	FIR 2 Filter			
24576070E-02      56870410E-03       .64952830E-02      22194710E-01        56665070E-01      21592960E-01      46964620E-01      27110750E-01        66665070E-01      20294310E+00      5018370E+00      27110750E-01        66665070E-04      23775850E-04      57189790E-05      34235910E-04        30510890E-04      43331380E-04      74450120E-04      3526470E-04        1262920E-03       .12775610E-04      20250920E-03      11221470E-03        12572530E-03      27373450E-02      123787890E-03      93176250E-03        12572530E-03      12734340E-02       .131650E-02      8766380E-03        12572530E-03      12777060E-02      1243130E-02      880850E-03        12572530E-03      12777060E-02      1314520E-02       .6808540E-02        26257430E-02      10231140E-02      1314520E-02      808630E-02        16352590E-01      10405840E+00      119045860E-02      87902020E-01        1278280E-04      18829700E+00      11441210E-03      9101250E-03        2004260E-01      20677420E-01      5734200E-04      5734200E-04        1278280E-04       .48643590E-04       .11441210E-03      9	Coefficients:			
.54490100E-02 .65665070E-01        21592960E-01 .20294310E+00        46964620E-01 .30618330E+00        27110750E-01           FIR 3 Filter         Coefficients:        10469050E-04 .30510890E-04        23775850E-04 433931380E-04        57189790E-05 .34235910E-04         .34235910E-04 .33569670E-04           .30510890E-04        23775850E-04 34881280E-03         .12775610E-04 .22050920E-03         .12221470E-03 .24881280E-03         .12736810E-03 .23787890E-03         .4882980E-03 .23787890E-03         .93176250E-03 .9376250E-03           .18237780E-02         .11356850E-02 .12079460E-02         .11356850E-02 .32042740E-02         .87963280E-03 .33271762E-02           .3063210E-02         .177060E-02 .1209940E-02         .31243130E-02 .323271762E-02         .82323910E-02 .323271762E-02           .4623530E-03         .1938710E-02 .1259530E-01         .3905990E-02 .325930E-01         .3905990E-02 .32094260E-01           .4531450E-01         .20608240E-01 .22094260E-01         .20608240E-01 .20697420E-01         .39170250E-03 .87902020E-01           .14170540E-01         .15229700E+00         .11441210E-03 .44503460E-00         .87902020E-01 .2858100E-02           .12782800E-04         .48643590E-04 .11441210E-03         .19101250E-03 .8890100E-02         .87932020E-04 .257321020E-04           .12782800E-04         .48643590E-04 .11441210E-03         .19101250E-03 .257321020E-04         .24626950E-03 .257332020E-04         <	.65879140E-04	.18999690E-03	48271860E-04	12167770E-02
.65665070E-01       .20294310E+00       .30618330E+00         FIR 3 Filter       Coefficients:       .10469050E-04      23775850E-04       .57189790E-05       .34235910E-04         .30510890E-04      43931380E-04      7450120E-04       .33569670E-04         .13626920E-03       .12775610E-04      20250920E-03      11221470E-03         .24881280E-03       .27300920E-03      23787890E-03      48829860E-03         .12572530E-03       .72734340E-02       .11356850E-02      87963280E-03         .55240180E-03       .10165270E-02       .11356850E-02       .48635570E-03         .30083210E-02      51224640E-02       .31243130E-02       .48635570E-03         .3059320E-01       .15189370E-02       .20677420E-01       .3523910E-02         .4634530E-03      79983710E-02      20677420E-01       .35219510E-01         .14955810E-02       .70231140E-02      12559303E-01       .3909990E-02         .2094260E-01       .5525850E-01       .19045560E-02       .879922020E-01         .1470540E-01       .5525850E-01       .19045560E-02       .87392020E-04         .21918730E-03       .10430840E-03       .242625950E-03       .82881090E-03         .21918730E-04       .48643590E-04       .11441210E-03       .1910	24576070E-02	56870410E-03	.64952830E-02	.12949710E-01
FIR 3 Filter           0.10469050E-04        23775850E-04        57189790E-05         .34235910E-04           .30510890E-04        43931380E-04        74450120E-04         .3356670E-04           .12626920E-03         .12775610E-04        20250920E-03        121470E-03           .24881280E-03         .2730920E-03        21878980E-03        93176250E-03           .12572530E-03         .72734340E-03         .12936810E-03        93176250E-03           .55240180E-02         .10165270E-02         .11356350E-02         .4862380E-03           .30083210E-02         .1077060E-02         .31243130E-02         .4863530E-03           .30083210E-02         .70931140E-02         .1214500E-02         .68085340E-02           .22657430E-02         .70931140E-02         .1259530E-01         .3065990E-02           .16935290E-01         .15189370E-02         .20422150E-01         .95799080E-02           .2204260E-01         .20608240E-01         .1091250E-03         .19101250E-03           .14170540E-01         .55255850E-01         .10945860E-02         .82881090E-03           .14170540E-01         .15829700E-00         .11441210E-03         .19101250E-03           .14973390E-02         .15842790E-02         .15440160E-02         .57334200E-0	.54490100E-02	21592960E-01	46964620E-01	27110750E-01
Notificients:          10469050E-04        23775850E-04        57189790E-05         .34235910E-04           .30510890E-04        43931380E-04        74450120E-04         .33569670E-04           .13626920E-03         .12775610E-04        20250920E-03        11221470E-03           .24881280E-03         .2730920E-02         .1326680E-02        87963280E-03           .155240180E-03         .10165270E-02         .11356850E-02        87963280E-03          18237780E-02         .42009940E-03         .25042740E-02         .4353570E-03          30033210E-02        51224640E-02         .13114520E-02         .68085340E-02          26257430E-02        51224640E-02         .13114520E-02         .68085340E-02           .94634530E-03        79983710E-02        12595930E-01         .395990E-02           .16935290E-01         .15189370E-02        20677420E-01        35219510E-01           .14170540E-01         .55255850E-01         .19045860E-02        87902020E-01           .45041460E-01         .1525580E-04         .11441210E-03         .19101250E-03           .21918730E-02        1842790E-02         .15440160E-02         .57334200E-04           .21918730E-02        18497290E-02         .15440160E-02         .57334	.65665070E-01	.20294310E+00	.30618330E+00	
10469050E-04      23775850E-04      57189790E-05       .34235910E-04         .30510890E-04      43931380E-04      74450120E-04       .33569670E-04         .13626920E-03       .12775610E-04      20250920E-03      11221470E-03         .24881280E-03       .27300920E-03      23787890E-03      93176250E-03         .12572530E-03       .72734340E-02       .11356850E-02      87963280E-03        80383210E-02      17077060E-02       .31243130E-02       .33271762E-02        26257430E-02      51224640E-02       .13114520E-02       .68085340E-02         .94634530E-03      79983710E-02      41534900E-02       .82323310E-02         .94634530E-03      79983710E-02      20422150E-01      95799080E-02         .16935290E-01       .20608240E-01      20677420E-01      95799080E-02         .22094260E-01       .26608240E-01      20677420E-01      95799080E-02         .4107540E-01       .15525850E-01       .19045860E-02      87902020E-01         .21918730E-02       .148643590E-04       .11441210E-03       .19101250E-03         .21918730E-02       .18942790E-02       -15440160E-02      7334200E-04         .21918730E-02       .11401210E-03       .19101250E-03       .28281090E-03<	FIR 3 Filter			
.30510890E-04      43931380E-04      74450120E-04       .33569670E-04         .13626920E-03       .12775610E-04      20250920E-03      11221470E-03         .24881280E-03       .27300920E-03      2378780DE-03      93176250E-03         .15272530E-03       .72734340E-03       .12936810E-03      93176250E-03        55240180E-03       .10165270E-02       .11356850E-02      87963280E-03        18237780E-02       .42009940E-03       .25042740E-02       .43635570E-03        30083210E-02      57124640E-02       .13114520E-02       .68085340E-02         .94634530E-03      79983710E-02      41534900E-02       .82323910E-02         .81525810E-02      70231140E-02      12595930E-01       .39059990E-02         .22094260E-01       .20608240E-01      20422150E-01      35799080E-02         .22094260E-01       .1528970E+00       .11441210E-03       .19101250E-03         .14170540E-01       .55255850E-01       .19045860E-02      87334200E-04         .14973390E-02       .18942790E-02       .11441210E-03       .19101250E-03         .14973390E-02       .18942790E-02       .1540160E-02       .57334200E-04         .25742180E-01       .1289460E+00       .15915570E+00       .38025140E+00	Coefficients:			
.30510890E-04      43931380E-04      74450120E-04       .33569670E-04         .13626920E-03       .12775610E-04      20250920E-03      11221470E-03         .24881280E-03       .27300920E-03      2378780DE-03      93176250E-03         .15272530E-03       .72734340E-03       .12936810E-03      93176250E-03        55240180E-03       .10165270E-02       .11356850E-02      87963280E-03        18237780E-02       .42009940E-03       .25042740E-02       .43635570E-03        30083210E-02      57124640E-02       .13114520E-02       .68085340E-02         .94634530E-03      79983710E-02      41534900E-02       .82323910E-02         .81525810E-02      70231140E-02      12595930E-01       .39059990E-02         .22094260E-01       .20608240E-01      20422150E-01      35799080E-02         .22094260E-01       .1528970E+00       .11441210E-03       .19101250E-03         .14170540E-01       .55255850E-01       .19045860E-02      87334200E-04         .14973390E-02       .18942790E-02       .11441210E-03       .19101250E-03         .14973390E-02       .18942790E-02       .1540160E-02       .57334200E-04         .25742180E-01       .1289460E+00       .15915570E+00       .38025140E+00	- 10469050F-04	- 23775850F-04	- 57189790F-05	342359105-04
.13626920E-03       .12775610E-04      20250920E-03      11221470E-03         .24881280E-03       .27300920E-03      23787890E-03      4822980E-03         .12572530E-03       .72734340E-03       .12936810E-03      4822980E-03         .18237780E-02       .42009940E-03       .25042740E-02       .43635570E-03         .30083210E-02      51224640E-02       .31243130E-02       .33271760E-02         .26257430E-02      51224640E-02       .1141520E-02       .68085340E-02         .94634530E-03      79983710E-02      12559530E-01       .39059990E-02         .16935290E-01       .15189370E-02      20422150E-01      95799080E-02         .14170540E-01       .55255850E-01       .19045860E-02      85219510E-01         .14170540E-01       .18229700E+00       .41058640E+00      85219510E-01         .147752890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-02       .18229700E+00       .11540160E-02       .5734200E-04         .21918730E-02       .1842790E-02       .1540160E-02       .5734200E-04         .21918730E-02       .1842790E-02       .11441210E-03       .19101250E-03         .21918730E-02       .1842790E-02       .5734200E-04       .5734200E-04 <t< td=""><td></td><td></td><td></td><td></td></t<>				
.12572530E-03       .72734340E-03       .12936810E-03      93176250E-03        55240180E-03       .10165270E-02       .11356850E-02       .87963280E-03        30083210E-02      17077060E-02       .31243130E-02       .43635570E-03        30083210E-02      17077060E-02       .31243130E-02       .68085340E-02        46257430E-02      51224640E-02       .13114520E-02       .68085340E-02        94634530E-03      79983710E-02      41534900E-02       .82323910E-02        81525810E-02      70231140E-02      12595930E-01       .39059990E-02        14170540E-01       .55255850E-01       .19045860E-02       .87902020E-01        45041460E-01       .18229700E+00       .41058640E+00       .87902020E-01        45041460E-01       .18229700E+00       .41058640E+00       .87902020E-01        12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03        14973390E-02      18942790E-02       .15440160E-02       .5734200E-04        14973390E-02      18942790E-02       .15440160E-02       .5734200E-04        19091240E-02      41013180E-02       .15440160E-02       .5734200E-04        28451320E-01      21612060E-01       .93961880E-03       .3307630E-01 <td></td> <td></td> <td></td> <td></td>				
55240180E-03       .10165270E-02       .11356850E-02      87963280E-03        18237780E-02       .42009940E-03       .25042740E-02       .43635570E-03        30083210E-02      17077060E-02       .31243130E-02       .832371760E-02        26257430E-02      51224640E-02       .13114520E-02       .68085340E-02         .94634530E-03      79983710E-02      41534900E-02       .83233910E-02         .81525810E-02      70231140E-02      20422150E-01      95799080E-02         .16935290E-01       .15189370E-02      20677420E-01      35219510E-01         .14170540E-01       .5525850E-01       .19045860E-02      87902020E-01        45041460E-01       .18229700E+00       .41058640E+00      87902020E-01        45041460E-01       .18229700E+00       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03      24262950E-03      82881090E-04         .21918730E-02       .18942790E-02       .1540160E-02       .57334200E-04         .21918730E-02       .5740760E-02       .80869100E-02       .79813300E-02         .48643590E-01       .1993570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .28451320E-01       .21612060E-01       .593961880E-03	.24881280E-03	.27300920E-03	23787890E-03	48829860E-03
18237780E-02       .42009940E-03       .25042740E-02       .43635570E-03        30083210E-02      17077060E-02       .31243130E-02       .33271760E-02        26257430E-02      51224640E-02       .13114520E-02       .66085340E-02        94634530E-03      79983710E-02      41534900E-02       .82323910E-02        81525810E-02      70231140E-02      12595390E-01       .39059990E-02        2094260E-01       .20608240E-01      20677420E-01      35219510E-01        14170540E-01       .55255850E-01       .19045860E-02      87902020E-01        45041460E-01       .18229700E+00       .41058640E+00      82881090E-03        14170540E-02      18942790E-02       .15440160E-02      57334200E-04        1918730E-03       .10430840E-03      24262950E-03      82881090E-03        14973390E-02      18942790E-02      15440160E-02      57334200E-04        40091240E-02      41013180E-02      14800320E-01      24551390E-01        28451320E-01      21612060E-01      93961880E-03       .33307630E-01        29584940E-01      1289460E+00       .11696820E+00       .13025140E+00        14987990E-02      18729370E-02       .11696820E+00       .1	.12572530E-03	.72734340E-03	.12936810E-03	93176250E-03
30083210E-02      17077060E-02       .31243130E-02       .33271760E-02        26257430B-02      51224640E-02       .13114520E-02       .66085340E-02         .94634530E-03      79983710E-02      41534900E-02       .82323910E-02         .81525810E-02      70231140E-02      20422150E-01      9579908E-02         .16935290E-01       .15189370E-02      20422150E-01      95799080E-02         .2004260E-01       .20608240E-01      20677420E-01      35219510E-01         .14170540E-01       .55255850E-01       .19045860E-02      87902020E-01         .45041460E-01       .18229700E+00       .41058640E+00      87992020E-01         .45041460E-01       .18229700E+00       .41058640E+00      87934200E-04         .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-02       .10430840E-03      24262950E-03      82881090E-02         .14973390E-02       .5742760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .1440103020E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .11696820E+00       .119135740E-01	55240180E-03	.10165270E-02	.11356850E-02	87963280E-03
26257430E-02      51224640E-02       .13114520E-02       .68085340E-02         .94634530E-03      79983710E-02      41534900E-02       .82323910E-02         .81525810E-02      70231140E-02      12595930E-01       .39059990E-02         .16935290E-01       .15189370E-02      20422150E-01      95799080E-02         .22094260E-01       .20608240E-01      20677420E-01      35219510E-01         .14170540E-01       .15255850E-01       .19045860E-02      87902020E-01        45041460E-01       .18229700E+00       .4105860E-02      87902020E-01         .45041460E-01       .1829700E+00       .4105860E-02      87902020E-01         .212782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-02       .10430840E-03      24262950E-03      82881090E-02         .14973390E-02       .18942790E-02       .15440160E-02       .57334200E-04         .40091240E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .44103180E-02       .14800320E-01       .24551390E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         .17959570E+00       .15658660E+00       .11696820E+00       .19135740E-01     <	18237780E-02	.42009940E-03	.25042740E-02	.43635570E-03
	30083210E-02	17077060E-02	.31243130E-02	.33271760E-02
.81525810E-02      70231140E-02      12595930E-01       .39059990E-02         .16935290E-01       .20608240E-01      20422150E-01      95799080E-02         .22094260E-01       .55255850E-01       .19045860E-02      87902020E-01         .45041460E-01       .18229700E+00       .41058640E+00      87902020E-01         .45041460E-01       .18229700E+00       .41058640E+00      87902020E-01         .45041460E-01       .18229700E+04       .41058640E+00       .19101250E-03         .21918730E-03       .10430840E-03       .24262950E-03      82881090E-02         .14973390E-02       .18942790E-02       .15440160E-02       .57334200E-04         .40091240E-02       .57240760E-02       .14800320E-01      93961880E-03       .3307630E-01         .76832370E-01       .21612060E-01       .93961880E-03       .3307630E-01       .3307630E-01         .76832370E-01       .15658660E+00       .11696820E+00       .119135740E-01       .19135740E-01         .19804620E-03       .116726350E-03       .30742490E-04       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04	26257430E-02	51224640E-02	.13114520E-02	.68085340E-02
.16935290E-01       .15189370E-02       .20422150E-01       .95799080E-02         .22094260E-01       .20608240E-01       .20677420E-01       .35219510E-01         .4170540E-01       .55255850E-01       .19045860E-02       .357902020E-01         .45041460E-01       .18229700E+00       .41058640E+00       .87902020E-01         FIR 5 Filter       .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03       .24262950E-03       .82881090E-04         .25742180E-02       .57240760E-02       .80869100E-02       .57334200E-04         .4091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .3307630E-01         .76832370E-01       .15658660E+00       .15915570E+00       .38025140E+00         .17959570E+00       .15658660E+00       .11696820E+00       .19135740E-01         .14987090E-01       .19804620E-03       .15757160E-01       .19135740E-01         .14985030E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .34052430E-04       .52109530E-0				
.22094260E-01       .20608240E-01      20677420E-01      35219510E-01         .4170540E-01       .55255850E-01       .19045860E-02       .87902020E-01         .45041460E-01       .18229700E+00       .41058640E+00       .87902020E-01         FIR 5 Filter       .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03      24262950E-03       .82881090E-03         .14973390E-02       .18942790E-02       .15440160E-02       .5734200E-04         .40091240E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .14800320E-01       .33307630E-01         .76832370E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .21658660E+00       .11696820E+00       .71106050E-01         .14987090E-01       .19804620E-03       .11696820E+00       .19135740E-01         .14987090E-01       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430				
.14170540E-01       .55255850E-01       .19045860E-02      87902020E-01         FIR 5 Filter       .102782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03       .24262950E-03       .82881090E-04         .25742180E-02       .57240760E-02       .8069100E-02       .57334200E-04         .25742180E-02       .5740760E-02       .80869100E-02       .7481330E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .2189460E+00       .15915570E+00       .33307630E-01         .76832370E-01       .2189460E+00       .11696820E+00       .71106050E-01         .7959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .1990420E-02       .18729370E-02       .11472870E-02       .52109530E-03         .14987090E-01       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04 </td <td></td> <td></td> <td></td> <td></td>				
45041460E-01       .18229700E+00       .41058640E+00         FIR 5 Filter       Coefficients:       .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03      24262950E-03       .82881090E-04         .14973390E-02       .18942790E-02      15440160E-02       .57334200E-04         .25742180E-02       .57240760E-02       .80869100E-02       .57334200E-04         .4091240E-02       .41013180E-02       .14800320E-01       .79813300E-02         .28451320E-01       .21612060E-01       .93961880E-03       .3307630E-01         .76832370E-01       .2189460E+00       .15915570E+00       .18025140E+00         .76832370E-01       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01       .15658660E+00       .11696820E+00       .71106050E-01         .21350310E-02       .30742490E-04       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .21472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         .50352610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .39379800E				
FIR 5 Filter         Coefficients:         .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03       .24262950E-03       .82881090E-03         .14973390E-02       .57240760E-02       .80869100E-02       .5734200E-04         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .3307630E-01         .76832370E-01       .21612060E-01       .93961880E-03       .3307630E-01         .76832370E-01       .2169460E+00       .15915570E+00       .18025140E+00         .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .21350310E-02       .30742490E-04       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .34052430E-04       .34052430E-04				8/902020E-01
Coefficients:         .12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03      24262950E-03      82881090E-03         .14973390E-02       .18942790E-02      15440160E-02       .57334200E-04         .25742180E-02       .57240760E-02       .80869100E-02       .57334200E-04         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .21612060E-01       .15915570E+00       .18025140E+00         .76832370E-01       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01       .18004620E-03       .15757160E-01       .19135740E-01         .14987090E-01       .82432300E-02       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .34052430E-04       .34052430E-04         .53052610E-05       .10953120E-04       .206		.102297001100	.410300401100	
.12782890E-04       .48643590E-04       .11441210E-03       .19101250E-03         .21918730E-03       .10430840E-03       .24262950E-03       .82881090E-03         .14973390E-02       .18942790E-02       .15440160E-02       .57334200E-04         .25742180E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         .76832370E-01       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01       .19804620E-03       .15757160E-01       .19135740E-01         .14987090E-01       .82432300E-02       .24120900E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .34052430E-04 <td></td> <td></td> <td></td> <td></td>				
.21918730E-03       .10430840E-03      24262950E-03      82881090E-03         .14973390E-02       .18942790E-02       .15440160E-02       .57334200E-04         .25742180E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter         Coefficients:         .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .14987090E-01       .982432300E-02       .15757160E-01       .19135740E-01         .14987090E-01       .82432300E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04	Coefficients:			
14973390E-02      18942790E-02      15440160E-02      57334200E-04         .25742180E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter       .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01      19804620E-03       .15757160E-01       .19135740E-01       .10071550E-02         .14987090E-01       .18729370E-02       .11472870E-02       .52109530E-03       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04	.12782890E-04	.48643590E-04	.11441210E-03	.19101250E-03
.25742180E-02       .57240760E-02       .80869100E-02       .79813300E-02         .40091240E-02       .41013180E-02       .14800320E-01       .24551390E-01         .28451320E-01       .21612060E-01       .93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter         Coefficients:         .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01      19804620E-03       .15757160E-01       .19135740E-01         .14987090E-01      82432300E-02       .15757160E-01       .10071550E-02         .21550310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .20675100E-04       .34052430E-04         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .34052430E-04				
.40091240E-02      41013180E-02      14800320E-01      24551390E-01         .28451320E-01       .21612060E-01      93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter         Coefficients:         .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01      19804620E-03       .15757160E-01       .19135740E-01         .14987090E-01       .82432300E-02       .1472870E-02       .10071550E-02         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04				
28451320E-01      21612060E-01      93961880E-03       .33307630E-01         .76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter				
.76832370E-01       .12189460E+00       .15915570E+00       .18025140E+00         FIR 7 Filter       Coefficients:       .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01      19804620E-03       .15757160E-01       .19135740E-01         .14987090E-01      82432300E-02       .24120900E-02       .10071550E-02         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter       Coefficients:       .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04				
FIR 7 Filter         Coefficients:         .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01      19804620E-03      15757160E-01      19135740E-01         .14987090E-01      82432300E-02       .24120900E-02       .10071550E-02         .21350310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04				
Coefficients:       .17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01       .         .29584940E-01      19804620E-03      15757160E-01      19135740E-01        14987090E-01      82432300E-02       .24120900E-02       .10071550E-02         .21350310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04		.121091001.00	.139133701100	.100231101100
.17959570E+00       .15658660E+00       .11696820E+00       .71106050E-01         .29584940E-01       .19804620E-03       .15757160E-01       .19135740E-01         .14987090E-01       .82432300E-02       .24120900E-02       .10071550E-02         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04				
.29584940E-01      19804620E-03      15757160E-01      19135740E-01         .14987090E-01      82432300E-02       .24120900E-02       .10071550E-02         .21350310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04	Coefficients:			
14987090E-01      82432300E-02      24120900E-02       .10071550E-02         .21350310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04				
.21350310E-02       .18729370E-02       .11472870E-02       .52109530E-03         .16726350E-03       .30742490E-04       .11472870E-02       .52109530E-03         FIR 8 Filter				
.16726350E-03 .30742490E-04 FIR 8 Filter Coefficients: .53052610E-05 .10953120E-04 .20675100E-04 .34052430E-04 .50472810E-04 .68211750E-04 .84200660E-04 .93979800E-04				
FIR 8 Filter         Coefficients:         .53052610E-05       .10953120E-04       .20675100E-04       .34052430E-04         .50472810E-04       .68211750E-04       .84200660E-04       .93979800E-04			.114/28/0E-02	.27103230E-03
Coefficients:         .20675100E-04         .34052430E-04           .53052610E-05         .10953120E-04         .20675100E-04         .34052430E-04           .50472810E-04         .68211750E-04         .84200660E-04         .93979800E-04		.30/42490E-04		
.53052610E-05 .10953120E-04 .20675100E-04 .34052430E-04 .50472810E-04 .68211750E-04 .84200660E-04 .93979800E-04				
.50472810E-04 .68211750E-04 .84200660E-04 .93979800E-04	Coefficients:			
	.53052610E-05	.10953120E-04	.20675100E-04	.34052430E-04
.91897430E-04 .71636490E-04 .27084270E-0446485310E-04				
	.91897430E-04	.71636490E-04	.27084270E-04	46485310E-04

#### -.15100320E-03 -.28415160E-03 -.43808070E-03 -.59857000E-03 -.74491660E-03 -.85078410E-03 -.88618130E-03 -.82060140E-03 .20297010E-03 .83102670E-03 -.62718340E-03 -.28758020E-03 .23363420E-02 .15615300E-02 .30754000E-02 .36809580E-02 .40450460E-02 .40599480E-02 .36310380E-02 .26909270E-02 .12135200E-02 -.77365120E-03 -.31805090E-02 -.58504900E-02 -.85628220E-02 -.11041720E-01 -.12972550E-01 -.14024250E-01 -.89338860E-02 -.38172700E-02 -.13876500E-01 -.12249520E-01 .32581180E-01 .21625100E-01 .30945470E-02 .11665130E-01 .66128860E-01 .55420730E-01 .44036450E-01 .75563820E-01 .83180910E-01 .88529390E-01 .91287400E-01 FIR 9 Filter Coefficients: -.63165740E-06 -.62659390E-06 .12341120E-07 .19443620E-05 .92897450E-05 .52688010E-05 .12445590E-04 .12748020E-04 .38979440E-06 .87046720E-05 -.99129780E-05 -.18047240E-04 -.19491400E-04 -.11616430E-04 .43002920E-05 .22504380E-04 .32263790E-04 .13405330E-04 -.16936110E-04 .34411790E-04 -.46279200E-04 -.59500730E-04 -.46016810E-04 -.63744060E-05 .45373710E-04 .85775730E-04 .91924170E-04 .53358520E-04 -.97951750E-04 -.19861020E-04 -.14255550E-03 -.12460020E-03 -.40992450E-04 .78728180E-04 .18117280E-03 .21176560E-03 .14223950E-03 -.10259850E-04 -.18378220E-03 -.29509180E-03 .12294540E-03 -.12008070E-03 .34332070E-03 -.27808870E-03 .42759340E-03 .31267720E-03 .25394960E-04 -.31720130E-03 -.55291660E-03 -.54898170E-03 -.27285180E-03 .17702630E-03 .10637440E-03 .60176520E-03 .78727530E-03 .60901970E-03 -.51488380E-03 -.96290410E-03 -.99370050E-03 -.53871000E-03 .23864060E-03 .99472770E-03 .13537440E-02 .10901390E-02 .25880070E-03 -.79823550E-03 -.15868160E-02 -.16872140E-02 .30438790E-03 -.97042530E-03 .15734170E-02 .22119950E-02 .18360320E-02 .51828330E-03 -.11970330E-02 -.25107530E-02 .24128750E-02 -.27346700E-02 -.16423060E-02 .37022530E-03 .34870880E-02 .29651350E-02 .93716220E-03 -.17585740E-02 -.38698640E-02 -.43023520E-02 -.26724400E-02 .43201660E-03 .53930380E-02 .16054280E-02 .36408040E-02 .46822380E-02 -.25721630E-02 -.59171980E-02 -.67056870E-02 -.42873790E-02 .55216500E-02 .48599150E-03 .83789800E-02 .74249080E-02 .27166160E-02 -.38455880E-02 -.92457940E-02 -.10700780E-01 .52905760E-03 .87573810E-02 .13670180E-01 -.70426100E-02 .12425050E-01 .48309240E-02 -.62198690E-02 -.15746090E-01 -.18802240E-01 -.12872000E-01 .55895630E-03 .16093270E-01 .25168140E-01 .26359450E-01 .10638890E-01 -.13085150E-01 -.36463380E-01 -.47557470E-01 -.36446600E-01 .57424880E-03 .12526940E+00 .18337210E+00 .21718010E+00 .58698170E-01 FIR 10 Filter Coefficients: -.58341210E-05 -.97909810E-05 -.14950560E-04 -.18411240E-04 .26043100E-04 -.17651870E-04 -.10377960E-04 .45130490E-05 .50695700E-04 .72713060E-04 .85281480E-04 .82442490E-04 .61274060E-04 .23651500E-04 -.23135700E-04 -.67405480E-04 -.95796680E-04 -.97157430E-04 -.66560650E-04 -.81320900E-05 .64496310E-04 .13074540E-03 .16840730E-03 .16048740E-03 .17182670E-05 .10159850E-03 -.11440040E-03 -.21272770E-03 -.25939080E-03 -.23160750E-03 -.12678270E-03 .33505350E-04

### Appendix D - Filter Response Plots, Poles & Zeroes

Lynx Manual 65

## Appendix D - Filter Response Plots, Poles & Zeroes

.20673650E-03	.33995610E-03	.38523620E-03	.31579180E-03
.13760430E-03	10787590E-03	35208950E-03	51762300E-03
54179750E-03	39867720E-03	11216670E-03	.24520840E-03
.56929360E-03	.75359680E-03	.72298160E-03	.46145650E-03
.24388810E-04	47066000E-03	87408170E-03	10481340E-02
91212410E-03	47452460E-03	.15975800E-03	.81206220E-03
.12786600E-02	.13927240E-02	.10812130E-02	.39795400E-03
48014670E-03	12964150E-02	17875410E-02	17662870E-02
11884130E-02	18094000E-03	.98108760E-03	.19470490E-02
.23942110E-02	.21323790E-02	.11766510E-02	23782690E-03
17093030E-02	27805280E-02	30777790E-02	24364060E-02
97198160E-03	.93041830E-03	.27128880E-02	.38046110E-02
.38003170E-02	.26026980E-02	.48070990E-03	19821030E-02
40427900E-02	50181070E-02	45043970E-02	25293030E-02
.41830170E-03	.35003010E-02	.57607290E-02	.64147440E-02
.51099710E-02	.20761460E-02	18935850E-02	56389330E-02
79612020E-02	79942670E-02	55064680E-02	10335250E-02
.42143110E-02	.86632170E-02	.10829570E-01	.97904870E-02
.55284280E-02	96807720E-03	79023240E-02	13135920E-01
14809990E-01	11950010E-01	48711300E-02	.47579920E-02
.14249090E-01	.20571980E-01	.21218270E-01	.15025070E-01
.27228040E-02	12974050E-01	27805090E-01	36865790E-01
35778870E-01	21855210E-01	.50520950E-02	.42237240E-01
.84486840E-01	.12503380E+00	.15691950E+00	.17445760E+00

### DC Removal - IIR Filter

The IIR filter is implemented as a first order IIR filter using the following coefficients calculated at runtime where SR is the output sample rate and f is the filter's 3db corner frequency.

$$F_{1} = \frac{1 - \tan(\pi \times f / SR)}{1 + \tan(\pi \times f / SR)}$$
$$K = \frac{1}{1 + \tan(\pi \times f / SR)}$$

The time constant (TC) of the filter can be calculated as follows:

$$\mathrm{TC} = \frac{1}{2\pi \times f}$$

## **Appendix E - ViewDat**

### Description

VIEWDAT is a simple bench test program for the HRD, Lynx, Orion, and Lynx digitisers. It receives the digitiser output data over an RS-232 serial port, provides a real-time text display of seismic data, GPS status and instrument state-of-health, and a real-time graphical display of seismic data.

#### Version

1.04

### Synopsis

```
Viewdat [Port] [Baud] [-bN] [-x]
```

### **Usage and Options**

VIEWDAT may be run under DOS or in a DOS window under OS/2 using the command-line syntax given above. If you wish to use the graphical display mode of VIEWDAT you must run the program as a DOS full-screen session. The data port of the digitiser should be connected to one of the serial ports (com1 or com2). To avoid missing any data, the program should be started before the digitiser is powered up. However, the program may be started at any time; it will start displaying and recording data after receiving the next data sync (at the start of the next data packet).

VIEWDAT recognizes the following command-line options:

-	•
Com Port	Specify com1 or com2 to specify to which serial port the digitiser is connected. Default is com2.
Baud Rate	Specify the baud rate for communication with the digitiser. Accepted values are 12(00), 24, 48, 96, 192 and 384. The default is 38400. This MUST be set to the same value as that being used for transmission by the digitiser.
Data Bundles per Packet (-bN)	Specify the number of data bundles per compressed data packet. This must be an odd number in the range of 1 to 59. This MUST be set to the same value as that being used for transmission by the digitiser. The default is 59.
Transmission Mode (-x)	Data transmission may be optimized for wire (default) or radio mode (-x). In radio mode the data is scrambled and the data is augmented by filler in order to maintain the full transmission baud rate. In wire mode the data is unscrambled. This parameter MUST be set to the same value as that being used for transmission by the digitiser.
Help (-h)	Type VIEWDAT -h to display a usage summary.

### Commands

VIEWDAT recognizes the following keyboard commands:		
V	Toggles between the two display modes (text and graphics).	
Р	Pauses the display (stops displaying incoming data).	
R	Resumes updating the display.	
ESC	Exit the program.	

## Appendix E - ViewDat

In graphics mode VIEWDAT also provides the following commands:		
D	Toggle the DC removal option.	
	DC removal Off - the raw data is displayed	
	DC removal On - the packet mean is subtracted from the data before plotting.	
+/-	Changes the vertical scale factor for the trace plots.	

### Text Mode Display

The VIEWDAT text display is divided into 4 parts:

- 1. The top section of the screen shows current signal statistics from each data channel,
- 2. the next section shows the current GPS status,
- 3. the third section shows the most recent state-of-health readings and
- 4. the bottom section logs incoming messages and communication diagnostics.

### **Data Display**

The VIEWDAT display is packet-based. The digitiser outputs data in packets which contain a time stamp, followed by 4N to 16N data samples in a compressed format, where N is the number of data bundles per packet (see above). For example, if N = 59, each packet contains 236 to 944 samples, which corresponds to 1.2 to 4.7 seconds of data at 200 sps. VIEWDAT computes signal statistics based on the data contained within a single packet and displays the following information:

Channel Number	The digitiser channel number (0 to 5).
Sequence Number	The sequence number of this packet. Packets are numbered sequentially for each channel. Sequence number is reset to zero when the digitiser is restarted. Only the last 4 digits of the sequence number are shown.
Time	The time of the first sample in the packet in the format MM:SS.FRAC.
Number of Samples	The number of samples in the packet. This is also the number of samples over which the displayed values are calculated.
Maximum	The maximum sample value in the packet.
Minimum	The minimum sample value in the packet.
Mean	The arithmetic mean of all sample values in the packet.
RMS	The root mean square (standard deviation) of the sample values in the packet.
Trend	The rate of change of the mean value per second. This is determined through a linear regression of the sample value vs. time.
ZC - zero crossings	The number of zero crossings in the packet.
Frequency	Estimated signal frequency is based on the number of zero crossings. This is meaningful only for sinusoidal input signals.

### **GPS** Display

The GPS status display shows the GPS status and activity as determined from the most recent message received.

#### Status

Unlocked	The GPS is off or unlocked (not providing accurate time information).
Coarse Lock	The GPS is locked and the instrument time is in fast-lock mode.
Fine Lock	The GPS is locked and the instrument time is in fine-lock mode.
Mode	
NAV3D	The GPS has a full 3D time and position solution.
NAV2D	The GPS has a 2D time and position solution.

ACQ	The GPS is searching for satellites and does not have accurate time and
	position.

ACQ COLD: The GPS is searching for satellites in cold start mode.

### Num Satellites

This shows the number of satellites used for the current GPS time and position solution.

### Figure of Merit

An indicator of the horizontal position accuracy: 1 = best; 9 = unlocked.

### Date, Time and Position

The middle column of the GPS display shows the time and position returned by the GPS clock. Note that the time may not be completely up to date since the GPS information messages may be buffered for some time before being transmitted to VIEWDAT.

### **Channel Status**

The right hand column of the GPS display shows the current activity of the 5 GPS channels. Each channel may be searching for a satellite, tracking a satellite, or idle. The display also shows the PRN number of the satellite being searched for or tracked and the signal to noise ratio of the incoming GPS signal. The signal to noise ratio must usually be over 30 in order to track a satellite; over 40 is better. Poor signal to noise ratios often indicate that the GPS antenna is obstructed.

### State of Health Display

SSOH and FSOH	These fields show the most recent readings from the slow and fast state-of-health channels respectively. Readings are shown as counts from a 10-bit A/D and are always between 0 and 1023.
Comm Rx	This shows the number of bytes received from the digitiser by VIEWDAT.
Comm Ovr	This shows the number of bytes lost due to comport overruns (should be zero).
Bytes Lost	This shows the number of bytes lost due to sync or CRC errors. This should be zero for a good communication link. Any change in this value indicates that one or more messages have been lost, usually due to noise or fading on the serial data link.

### **Graphical Display**

In graphical display mode VIEWDAT plots the contents of each data packet as it is received. The vertical scale may be adjusted by pressing + or -; the current scale factor is shown in the status line at the top of the screen. The horizontal scale is adjusted automatically to the number of samples in the data packet. To the left of each trace VIEWDAT displays the maximum, minimum, mean and RMS for the current packet. The sequence number and number of samples for the displayed packet is shown in the upper left corner of the trace box; the time of the first sample is shown in the lower left corner. Definitions of all displayed fields are given above.

Note that VIEWDAT plots packets; since packets on different channels may be generated at different times the traces shown are not, in general, aligned with each other along the time axis.

### Environment

Viewdat will run under DOS (DOS 6.2 or higher), in DOS full-screen mode under OS/2, Windows95 or WindowsNT.

This page intentionally left blank.

## Appendix F - Upgrading HRD24 firmware using ZOC

The following is also applicable for upgrading the digitiser firmware in an digitiser. Remove the disk cartridge from the digitiser prior to upgrading its firmware.

### Install ZOC on PC

- 1. Insert the appropriate ZOC installation diskette (**ZOC for OS/2** or **ZOC for Windows**) into the floppy drive of the PC.
- 2. Open a command prompt window.
- **3.** Change the working directory to the floppy drive by typing **a**: at the command prompt and pressing **Enter**. (assuming A: is the floppy drive)
- 4. At the command prompt type install (if OS/2) or setup (if Windows) and press Enter.
- 5. If the "Destination path" box is empty, type c:\zoc (or a suitable alternative) in the box.
- 6. Press the ZOC Install button to start the installation.
- 7. When notified "All files processed installation complete", press the **OK** button.
- 8. When asked "Do you want to read ZOC's DOC files now?", press the No button.
- 9. To close the command prompt window, type exit and press Enter.
- **10.** Remove the ZOC installation diskette from the floppy drive of the PC and save it in a safe place.

### Configure ZOC

- 1. Start **ZOC** by double clicking on the icon created on the OS/2 desktop or from the entry in the Windows Start button menu.
- 2. If notified "No CTS signal from COM1", press the Abort button.
- 3. If a "License Agreement" window is displayed, press the Agree button.
- 4. If notified "New month -- do you want a phone cost report?", press the No button.
- 5. If a "Getting Started" help window is displayed, double click on the button at the top left of the help window to close it.
- 6. Select the **Options** item from the menu bar.
- 7. Select the **Settings...** item from the Options drop down menu.
- 8. Check that the I/O Device is set to Serial/Modem.
- 9. Check that the **Com-Port** is set to the PC comport to which the digitiser configuration port is connected.
- **10.** Check that the Com-Port baud is set to **9600**. (The Orion's are shipped with the configuration port set to 9600 baud. However, it may have been changed since then.)
- **11.** Check that the Com-Port is set to **8N1**. (8 bits data, no parity, 1 stop bit is the only option for the configuration port.)
- **12.** Deselect the Com-Port **Valid CD signal** handshaking option. The other handshaking options should already be deselected. (The digitiser configuration port does not have any of the modem control signals used for handshaking.)
- **13.** Press the **Transfer** tab at the right (if OS/2) or at the top (if Windows) of the "Options Settings".
- 14. Select the **Compuserve-B+** Protocol.
- **15.** Select both the **Disable ENQ** and the **Disable ENQ message** Compuserve-B+ options. This will prevent ZOC from hanging on binary data.

- 16. Select the **Zmodem** Protocol.
- 17. If OS/2, press the right arrow button at the bottom right to go to **[Page 2 of 2]** of the transfer options, otherwise if Windows, press the **Transfer-2** tab.
- **18.** Change the ASCII-/Clipboard Sending option **Char delay** to **0**. This will make ASCII uploads MUCH faster.
- **19.** Press the **Safety** tab.
- 20. Deselect the ... ending program Confirm ... option.
- 21. Deselect the Warning for high speed without RTS/CTS Miscellaneous option.
- **22.** If a "Getting Started" help window was displayed on startup press the Window tab and deselect the **Initial help window** Screen Elements option.
- 23. Press the Save button at the top of the "Options Settings" window.
- 24. Close ZOC by double clicking on the button at the top left of the ZOC window.

### Copy digitiser firmware to PC's hard drive

- Note: the new digitiser firmware must be copied to the PC's hard drive since uploading firmware from a floppy drive is not reliable. (A network drive is possible but a local drive is preferable.)
- 1. Insert the digitiser Release diskette into the floppy drive of the PC.
- 2. The digitiser Release diskette contains 7 files.
- **3.** The file DSPDIAGS.HEX contains a diagnostics program which the DSP runs on startup to do basic hardware checks.
- **4.** The file DSPLOAD.HEX contains a utility program used to transfer the main DSP program into the DSP memory.
- 5. The file FIRS.HEX contains the FIR filter coefficients used by the DSP.
- **6.** The file DSPxx.HEX contains the main DSP firmware (xx indicates the version number) for the digitiser.
- 7. The file TCPyyy.HEX contains the main TCP firmware (yyy indicates the version number) for the digitiser.
- **8.** The file HRDzz.HEX contains the previous 5 files released in one file (zz indicates the release number) for uploading into HRDs.
- **9.** The file HRDzz.BIN contains the binary image of the file HRDzz.HEX used for burning into flashes.
- 10. Open a command prompt window.
- **11.** Change the working directory to **c:**/**zoc**/**upload** (assuming ZOC was installed in c:/zoc), at the command prompt type **cd**/**zoc**/**upload** and press **Enter**. This directory is chosen to make the ASCII uploads easier, however any directory may be chosen.
- **12.** Copy the new digitiser firmware release from the floppy, at the command prompt type **copy a:\digitiser\*.hex** and press **Enter**.
- **13.** Close the command prompt window.
- **14.** Remove the digitiser Release diskette from the floppy drive of the PC and save it in a safe place.

### Accessing the digitiser setup menu

- 1. Start ZOC.
- 2. Power on the digitiser.

3. The digitiser will start up with lines similar to the following:

TCP Version 5.12, released Mar 17 1997 16:36:40

### Press 'M' key within 5 seconds or during memory test

- 1. Immediately press the M key to access the digitiser menu. (There will be at least a 5 second window to press the M key, longer if there is a lot of memory to test.)
- 2. After a power on the memory test will end with the following lines. (the number of memory banks depends on the digitiser)

Writing 5555 to 8 banks...... Checking for 5555, writing aaaa to 8 banks...... Checking for aaaa, writing 0000 to 8 banks......

- 6. If the digitiser has proceeded past the memory test, the menu will still be displayed and the configuration may be changed. However, it is **UNSAFE** to do a firmware upload. The digitiser firmware may be severely corrupted (possibly unrecoverable).
- 7. If intending to upload new firmware, and the digitiser has proceeded past the memory test or if you are unsure if it has, power it off and start again.

### Upload new firmware

- 1. Access the digitiser setup menu as outlined above.
- 2. Double check that the digitiser did not proceed past the memory test.
- **3.** Press the U key to select the "Upload new firmware" option. (On older firmware, press the **D** key to select the "Download New Firmware" option.)
- 4. The digitiser will respond with "Ready to Upload..."
- 5. Select the **Transfer** item from the menu bar.
- 6. Select the ASCII-Send... item from the Transfer drop down menu.
- 7. Use the Select ASCII Upload File dialog box to select the file containing the new digitiser firmware release. Change the Drive and Directory as necessary if the firmware was not copied to the c:\zoc\upload directory.
- 8. Press the **OK** button to start the upload.
- **9.** Do not touch the digitiser or the PC while the upload is in progress, this will take almost 8 minutes.
- **10.** When it has finished, the digitiser will automatically program the new firmware and reboot.
- **11.** The digitiser will start up with a line indicating the new version number and release date.

### Uploading at faster than 9600 baud

Note: 9600 baud is the fastest baud rate that is reliable on all machines. However PCs with buffered com ports (have a 16550 compatible UART) or fast 486s and Pentiums should upload reliably at 38400.

Uploading at 19200 reduces the upload time from 8 to 4 minutes, while uploading at 38400 reduces it to 2 minutes.

- 1. Access the digitiser setup menu as outlined above.
- 2. Press the C key to select the "Configuration menu" option.
- 3. Press the **H** key to select the "Edit hardware setup parameters" option. (On older firmware press the **G** key to select the "Edit data communications parameters" option.)
- 4. Press the B key to change the "Configuration baud rate" setting.

- 5. Type the desired new baud rate and press Enter.
- 6. Check that the baud rate has been changed.
- 7. Press the **Esc** key twice to return to the main digitiser setup menu.
- 8. Press the P key to select the "Program user settings" option.
- 9. Power off the digitiser.
- 10. Press the button labeled 9600-8N1 at the bottom left corner of ZOC.
- 11. Change the Com-Port baud to the new baud rate set in the digitiser.
- 12. Press the Save button.

### Creating a button for uploading firmware

*Note: this feature is only available on ZOC for OS/2.* 

This feature is of most use when the file to upload is not in the c:\zoc\upload directory and requires a lot of drive and directory changing to find it using the **Select ASCII Upload File** dialog box.

- 1. Start ZOC.
- 2. Open the **Options Settings** window.
- **3.** Press the **Buttons** tab.
- 4. Find the first line with nothing under the "Value" heading.
- Under the "Value" heading type ^XFER=type c:\zoc\upload\hrdzz.hex 1>&%ZOCHFC% -r. The file indicated should contain the new digitiser firmware release.
- 6. Under the "Button Text" heading type **HRDzz** (replace zz with the appropriate release number).
- 7. Press the Save button.
- **8.** A button should have been created with the label HRDzz at the top of the ZOC window.
- 9. Pressing this button is equivalent to selecting the same file using the Select ASCII Upload File dialog box (except no Bytes sent status).
- 10. With the digitiser off, test the button created by pressing it.
- **11.** A window labeled "ZOC Shell Window" should pop up with the name of the file being uploaded.
- **12.** Double click on the button at the top left of this window to close it. Otherwise it will automatically close several minutes later when the entire file has been uploaded.
- 13. Close ZOC.

## **Appendix G - External Cable Drawings**

